


Trouble Shooting Guide Starter Failure or Hard Starting

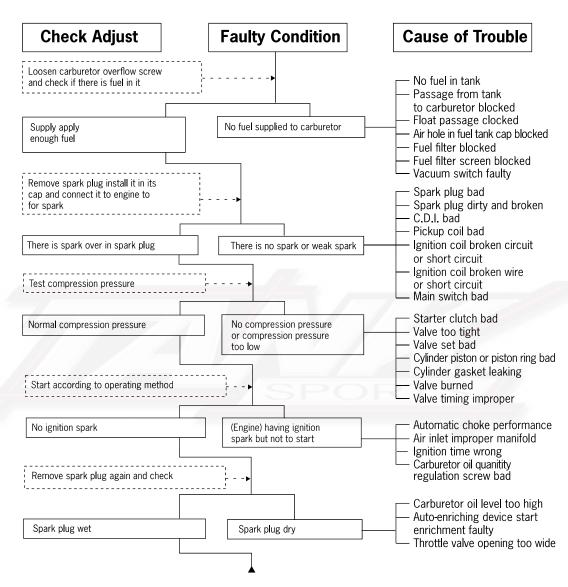


Trouble Shooting Guide (under speed, no power)

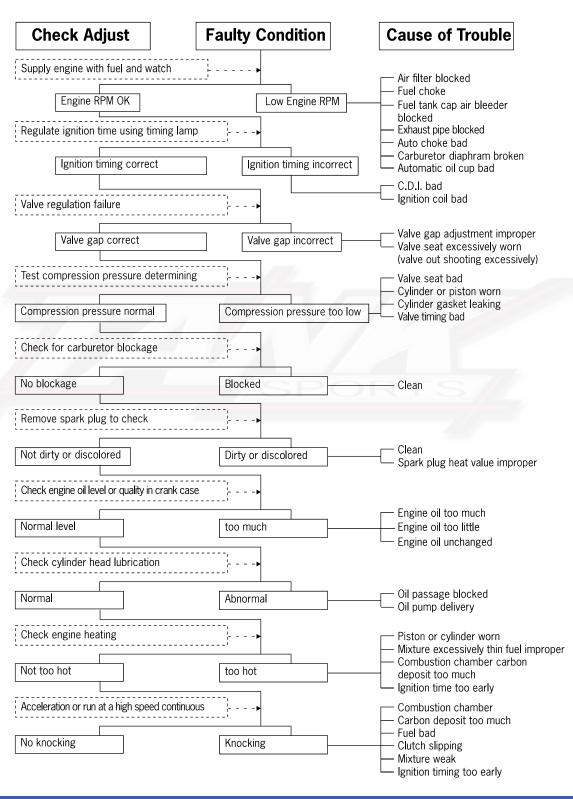


Trouble Shooting Guide (under speed, no power)

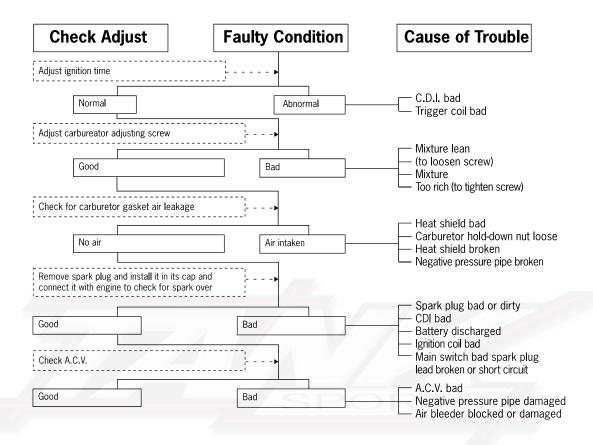

Trouble Shooting Guide (high speed)

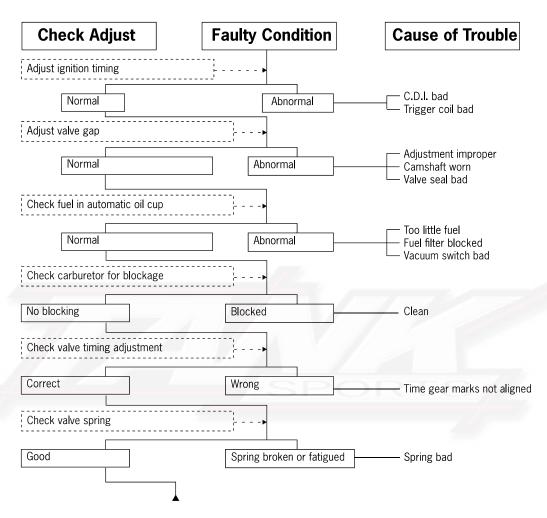

Trouble Shooting Guide-Improper Battery Charging (Battery overdischarge or overcharge)

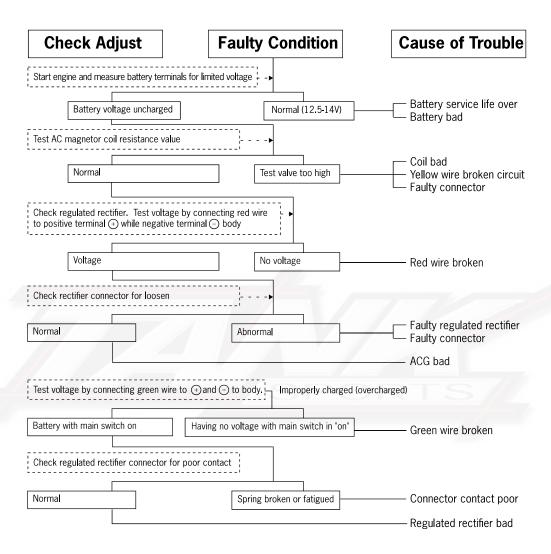

Trouble Shooting Guide (no spark)

