



POLARIS® and HAMMERHEAD® are trademarks of POLARIS Industries Inc. Copyright 2016 POLARIS Industries Inc. All information contained within this publication is based on the latest product information at the time of publication. Due to constant improvements in the design and quality of production components, some minor discrepancies may result between the actual vehicle and the information presented in this publication. Depictions and/or procedures in this publication are intended for reference use only. No liability can be accepted for omissions or inaccuracies. Any reprinting or reuse of the depictions and/or procedures contained within, whether whole or in part, is expressly prohibited.

The original instructions for this vehicle are in English. Other languages are provided as translations of the original instructions.

Printed in U.S.A.  
2017 Torpedo Owner's Manual  
P/N 9927513

# TABLE OF CONTENTS

<b>Introduction</b> . . . . .	<b>4</b>
<b>Safety</b> . . . . .	<b>7</b>
<b>Features and Controls</b> . . . . .	<b>20</b>
<b>Operation</b> . . . . .	<b>24</b>
<b>Emission Control Systems</b> . . . . .	<b>37</b>
<b>Maintenance</b> . . . . .	<b>38</b>
<b>Specifications</b> . . . . .	<b>65</b>
<b>Troubleshooting</b> . . . . .	<b>67</b>
<b>Warranty</b> . . . . .	<b>70</b>
<b>Maintenance Log</b> . . . . .	<b>76</b>
<b>Index</b> . . . . .	<b>78</b>

# INTRODUCTION

The Torpedo is an off-road vehicle. Familiarize yourself with all laws and regulations concerning the operation of this vehicle in your area.

The following signal words and symbols appear throughout this manual and on your vehicle. Your safety is involved when these words and symbols are used. Become familiar with their meanings before reading the manual.



The safety alert symbol indicates a potential personal injury hazard.

## DANGER

A DANGER indicates a hazardous situation that, if not avoided, will result in death or serious injury.

## WARNING

A WARNING indicates a hazardous situation that, if not avoided, could result in death or serious injury.

## CAUTION

A CAUTION indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.

## NOTICE

A NOTICE indicates a situation that could result in property damage.



The Prohibition Safety Sign indicates an action NOT to take in order to avoid a hazard.



The Mandatory Action Sign indicates an action that NEEDS to be taken to avoid a hazard.

# INTRODUCTION

## **WARNING**

Failure to heed the warnings and safety precautions contained in this manual can result in severe injury or death. Your HAMMERHEAD vehicle is not a toy and can be hazardous to operate. This vehicle handles differently than cars, trucks or other off-road vehicles. A collision or rollover can occur quickly, even during routine maneuvers like turning, or driving on hills or over obstacles, if you fail to take proper precautions.

- Read this owner's manual. Understand all safety warnings, precautions and operating procedures before operating the vehicle. Keep this manual with the vehicle.
- You **MUST** be at least age 6 to operate this vehicle.
- No person under the age of 6 may ride as a passenger in this vehicle. All riders must be able to sit with backs against the seat and both hands on the steering wheel (if driving) or on a passenger hand hold.
- Always keep hands, feet and all other body parts inside the vehicle at all times.
- Always wear a helmet, eye protection, gloves, long-sleeve shirt, long pants and over-the-ankle boots.
- Do not operate this vehicle at night or during periods of limited visibility.
- Never use this vehicle with drugs or alcohol, as these conditions impair judgment and reduce operator reaction time.
- Complete the New Operator Driving Procedures outlined on pages 29-30. Never allow a guest to operate this vehicle until the guest has watched the instructional video and has completed the New Operator Driving Procedures.

# INTRODUCTION

## Vehicle Identification Numbers


Record your vehicle's identification numbers in the spaces provided.  
Remove the spare key and store it in a safe place.

Vehicle Identification Number


Engine Serial Number  
(Engraved on the side of the  
block to the right of the recoil)



Manufacturing Data Label

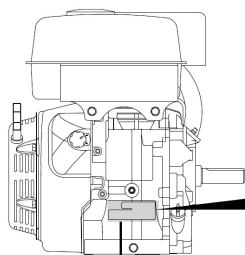

Engine Model Number Location

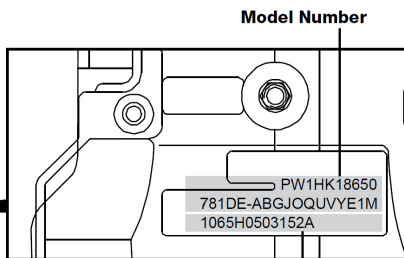

Model Number

Serial Number

Vehicle Model Number: \_\_\_\_\_

Vehicle Identification Number: \_\_\_\_\_

Engine Serial Number: \_\_\_\_\_

## Equipment Modifications

Your HAMMERHEAD vehicle is designed to provide safe operation when used as directed.

**WARNING!** Modifying this vehicle in any way can change the top speed, stability and handling performance of this vehicle. Modifications that increase speed, decrease stability or change performance may present a greater risk to inexperienced or younger operators and could result in loss of control and serious injury or death. Use only HAMMERHEAD-approved accessories to modify this vehicle. Review all vehicle changes prior to operating.

The HAMMERHEAD limited warranty on your HAMMERHEAD vehicle will be terminated if any non-HAMMERHEAD-approved equipment and/or modifications have been added to the vehicle that increase speed or power.

# SAFETY

## Safe Riding Gear

The driver and passenger must wear helmet, eye protection, gloves, long-sleeve shirt, long pants, over-the-ankle boots and seat belt at all times. Protective gear reduces the chance of injury.






## Safe Riding Gear

### Helmet

Wearing a helmet can prevent a severe head injury. Whenever riding this HAMMERHEAD vehicle, always wear a helmet that meets or exceeds established safety standards.

Approved helmets in the USA and Canada bear a U.S. Department of Transportation (DOT) label.

Approved helmets in Europe, Asia and Oceania bear the ECE 22.05 label. The ECE mark consists of a circle surrounding the letter E, followed by the distinguishing number of the country which has granted approval. The approval number and serial number will also be displayed on the label.

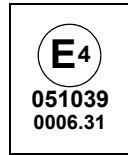

### Eye Protection

Do not depend on eyeglasses or sunglasses for eye protection. Whenever riding this HAMMERHEAD vehicle, always wear shatterproof goggles or use a shatterproof helmet face shield. HAMMERHEAD recommends wearing approved Personal Protective Equipment (PPE) bearing markings such as VESC 8, V-8, Z87.1, or CE. Make sure protective eye wear is kept clean.

### Gloves

Wear gloves for comfort and for protection from sun, cold weather and other elements.

### Boots

Wear sturdy over-the-ankle boots for support and protection. Never ride a HAMMERHEAD vehicle with bare feet or sandals.

### Clothing

Wear long sleeves and long pants to protect arms and legs.

### Rider Comfort

Under certain operating conditions, heat generated by the engine and exhaust system can elevate temperatures in the driver and passenger cab area. The condition occurs most frequently when a vehicle is being operated in high ambient temperatures at low speeds and/or high load conditions for an extended period of time. The use of certain windshield, roof and/or cab systems may contribute to this condition by restricting airflow. Any discomfort due to heat buildup in this area can be minimized by wearing proper riding apparel and by varying speeds to increase airflow.

# SAFETY

## Safety Warnings

### **⚠ WARNING**


Failure to operate this vehicle properly can result in a collision, loss of control, accident or rollover, which may result in serious injury or death. Heed all safety warnings outlined in this section of the owner's manual.

Be sure to read all of the following warnings about driving hazards and how to avoid them. These warnings are provided for your child's safety. Be sure to explain to your young driver that the hazards outlined in this section of this owner's manual **MUST** be avoided at all times. See the OPERATION section of this owner's manual for proper operating procedures.

### **Operating Without Instruction**

Operating this vehicle without proper instruction increases the risk of an accident. The operator and the supervising adult must understand how to operate the vehicle properly in different situations and on different types of terrain. Complete the New Operator Driving Procedures outlined on pages 29-30.

All operators must read and understand this owner's manual and all warning and instruction labels before operating the vehicle. Never allow a guest to operate this vehicle until the guest has read this manual and all product labels and has completed the New Operator Driving Procedures outlined on pages 29-30.

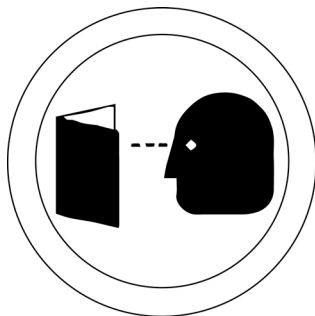

### **Operator Restrictions/Age Restrictions**

Operation is prohibited for anyone under 6 years of age.


Never operate with a passenger under the age of 6. All riders must be able to sit with backs against the seat, both feet flat on the floor and both hands on the steering wheel (if driving) or on a passenger hand hold.



## Safety Warnings

### Rider Height

Some riders may be too tall to ride safely in this vehicle. Do not operate or ride in this vehicle if the clearance between the top of your helmet and the brush bars is less than 2 inches (5 cm).

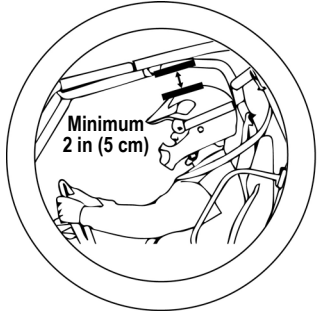

### Seat Belts

Riding in this vehicle without wearing the seat belt increases the risk of serious injury in the event of rollover, loss of control, other accident or sudden stop. Seat belts may reduce the severity of injury in these circumstances. Riders *must* wear seat belts at all times. Always make sure the seat belts are secured for both the operator and passenger before riding.

### Using Alcohol or Drugs

Riding in this vehicle after consuming alcohol or drugs could adversely affect operator judgment, reaction time, balance and perception.

Never consume alcohol or drugs before or while operating or riding in this vehicle.




### Failure to Inspect Before Operating

Failure to inspect and verify that the vehicle is in safe operating condition before operating increases the risk of an accident.

Always inspect the vehicle before each use to make sure it's in safe operating condition. See page 26.

Always follow the inspection and maintenance procedures and schedules described in this owner's manual. See page 38.

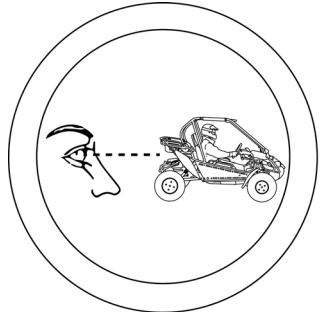

# SAFETY

## Safety Warnings

### Protective Apparel

Riding in this vehicle without wearing an approved helmet and protective eyewear increases the risk of serious injury in the event of an accident.

Operator and passenger must always wear an approved helmet that fits properly and eye protection (goggles or face shield).



### Carrying a Passenger

Never carry a passenger until you have operated this vehicle for at least four hours and have completed the New Operator Driving Procedures outlined on pages 29-30.

### Carrying Multiple Passengers

A passenger must always be seated in a passenger seat with seat belt secured. Carrying more than one passenger in this vehicle can affect the operator's ability to steer and operate the controls, which increases the risk of loss of control and accident or rollover. Never carry more than one passenger in this vehicle.

### Operating on Pavement

This vehicle's tires are designed for off-road use only, not for use on pavement. Operating this vehicle on paved surfaces (including sidewalks, paths, parking lots and driveways) may adversely affect the handling of the vehicle and may increase the risk of loss of control and accident or rollover. Avoid operating the vehicle on pavement.

### Operating on Public Roads

Operating this vehicle on public streets, roads or highways could result in a collision with another vehicle. Never operate this vehicle on any public street, road or highway, including dirt and gravel roads (unless designated for off-highway use).




## Safety Warnings

### Operating at Excessive Speeds

Operating this vehicle at excessive speeds increases the operator's risk of losing control.

Always operate at a speed that's appropriate for the terrain, the visibility and operating conditions, your skills and experience and your passengers' skills and experience.

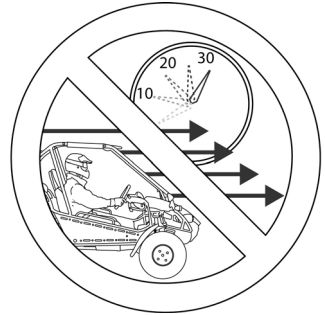


### Turning Improperly

Turning improperly could cause loss of traction, loss of control, accident or rollover. Always follow proper procedures for turning as described in this owner's manual.

Never turn abruptly or at sharp angles. Never turn at high speeds. Practice turning at slow speeds before attempting to turn at faster speeds.

### Jumps and Stunts

Exhibition driving increases the risk of an accident or rollover. DO NOT do power slides, "donuts", jumps or other driving stunts. Avoid exhibition driving.

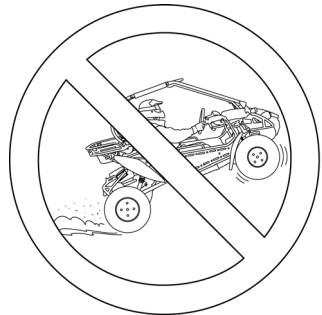

### Crossing Hillside

Driving on a sidehill is not recommended. Improper procedure could cause loss of control or rollover. Avoid crossing the side of any hill unless absolutely necessary.

If crossing a hillside is unavoidable, always follow proper procedures as described in this owner's manual. See page 34.

### Physical Control of the Vehicle

Removing hands from the steering wheel or hand holds or removing feet from the floor while riding increases the risk of loss of control and accident or rollover.

The operator should always keep both hands on the steering wheel during operation. A passenger should always be seated in the passenger seat with both feet on the floor and with both hands securely grasping the hand holds.


*Always keep hands and feet inside the vehicle at all times.*

# SAFETY

## Safety Warnings


### Driving Downhill Improperly

Driving down a hill improperly could cause loss of control or rollover. Always follow proper procedures for driving down a hill as described in this owner's manual. See page 34.

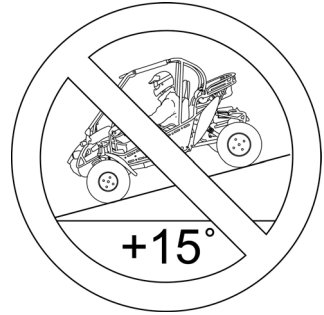

### Improper Hill Climbing

Improper hill climbing could cause loss of control or rollover. Use extreme caution when operating on hills. Always follow proper procedures for hill climbing as described in this owner's manual. See page 33. Never operate the vehicle on hills steeper than 15 degrees.

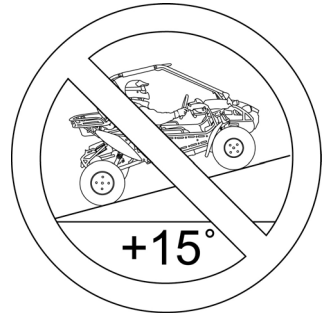


### Stalling While Climbing a Hill

Stalling or rolling backwards while climbing a hill could cause a rollover. Maintain a steady speed when climbing a hill.

*If you lose all forward speed:*

Apply the brakes gradually until the vehicle is fully stopped. Place the transmission in reverse and slowly allow the vehicle to roll straight downhill while applying light brake pressure to control speed.

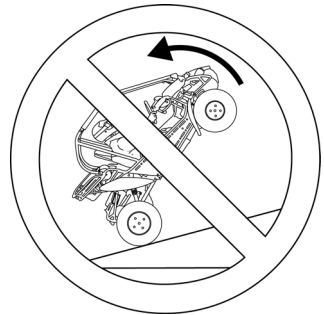

## Safety Warnings

### Operating in Unfamiliar Terrain

Failure to use extra caution when operating on unfamiliar terrain could result in an accident or rollover.

Unfamiliar terrain may contain hidden rocks, bumps, or holes that could cause loss of control or rollover.

Travel slowly and use extra caution when operating on unfamiliar terrain. Always be alert to changing terrain conditions.



### Operating on Sand or Slippery Terrain

Operating on sand or on excessively rough, slippery or loose terrain could cause loss of traction, loss of control, accident or rollover.

Always use extra caution when operating on sand or on rough, slippery or loose terrain. Do not operate on *excessively* rough, slippery or loose terrain.



### Operating Improperly in Reverse

Improperly operating in reverse could result in a collision with an obstacle or person. Always follow proper operating procedures as outlined in this manual. See page 40.

Before shifting into reverse gear, always check for obstacles or people behind the vehicle. When it's safe to proceed, back slowly.



### Overloading the Vehicle

Overloading the vehicle or carrying/towing loads may cause changes in stability and handling, which could cause loss of control or an accident.

- Never tow objects or carry loads over the maximum cargo limit.
- Never exceed the maximum weight capacity for this vehicle. See page 19.

# SAFETY

## Safety Warnings

### Operating Over Obstacles

Improperly operating over obstacles could cause loss of control or rollover.

Before operating in a new area, check for obstacles. Never attempt to operate over large obstacles such as large rocks or fallen trees. Always follow the proper procedures outlined in this manual when operating over obstacles. See page 36.



### Operating Through Water

Operating through deep or fast-flowing water can cause loss of traction, loss of control, rollover or accident. Never operate in fast-flowing water or in water that exceeds the floor level.

Always follow proper procedures for operating in water as described in this owner's manual. See page 35.

Wet brakes may have reduced stopping ability. After leaving water, test the brakes. Apply them lightly several times while driving slowly. The friction will help dry out the pads.




### Operating on Frozen Bodies of Water

Operating on frozen bodies of water can result in the vehicle and/or riders falling through the ice. Never operate this vehicle on a frozen body of water.

### Improper Tires and Maintenance

Operating this vehicle with improper tires or with improper or uneven tire pressure could cause loss of control, accident or rollover. Always use the size and type of tires specified for your vehicle. Always maintain proper tire pressure as described in this owner's manual and on safety labels.

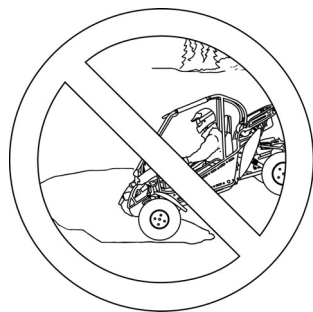



## Safety Warnings

### Operating a Damaged Vehicle

Operating a damaged vehicle can result in an accident. After any rollover or other accident, have a qualified service dealer inspect the entire machine for possible damage, including (but not limited to) seat belts, rollover protection devices, brakes, throttle and steering systems.

### Refueling

Gasoline is highly flammable and is explosive under certain conditions. Always exercise extreme caution whenever handling gasoline.

- Never allow a child to refuel or handle gasoline.
- Always stop the engine when refueling.
- Always refuel outdoors or in a well ventilated area.
- Do not smoke or allow open flames or sparks in or near the refueling area or where gasoline is stored.
- Never refuel while a person is in the vehicle.
- Do not over fill the tank. Do not fill the tank neck.
- If gasoline spills on your skin or clothing, immediately wash it off with soap and water and change clothing.

### Exposure to Exhaust

Engine exhaust fumes are poisonous and can cause loss of consciousness or death in a short time. Never start the engine or let it run in an enclosed area.

Operate this vehicle only outdoors or in well-ventilated areas.

### Hot Exhaust Systems

Exhaust system components are very hot during and after use of the vehicle. Hot components can cause burns and fire. Do not touch hot exhaust system components. Always keep combustible materials away from the exhaust system.

Use caution when traveling through tall grass, especially dry grass. Always inspect the underside of the vehicle and areas near the exhaust system after driving through tall grass, weeds, brush and other tall ground cover. Promptly remove any grass or debris clinging to the vehicle.

### Unauthorized Use of the Vehicle

Leaving the keys in the ignition can lead to unauthorized use of the vehicle by someone under the age of 6 or without proper training. This could result in an accident or rollover. Always remove the ignition key when the vehicle is not in use.

# SAFETY

## Safety Labels and Locations

Warning labels have been placed on the vehicle for your protection. Read and follow the instructions on each label carefully. If any of the labels shown in this manual differ from the labels on your vehicle, always read and follow the instructions of the labels on the *vehicle*.

If an informational or graphic label becomes illegible or comes off, contact your HAMMERHEAD dealer to purchase a replacement. Replacement *safety* labels are provided by HAMMERHEAD at no charge.

**WARNING!** This go-kart can be hazardous to operate if driven carelessly. Injuries can result if you do not follow these instructions:

- Read owner's manual and all labels before you operate this go-kart.
- Never operate this go-kart without proper instructions. Beginners require adult supervision.
- Never operate this go-kart on public roads. It is intended for off-road use only.
- Always wear an approved motorcycle helmet, eye protection and protective clothing.
- Never operate this go-kart at excessive speeds. You increase your risk of losing control if you operate it at speeds too fast for the terrain, visibility conditions or your experience.
- Never attempt wheelies, jumps, or other stunts.

### **WARNING! No Long Hair**

All hair must be tied up and secured at or above shoulder length. All loose clothing must be secured. all necklaces and scarves must be secured.



## Safety Labels and Locations

**WARNING!** Loss of control, collision, or getting caught in moving parts can result in serious injuries.

- No operation if under the age of 6.
- Wear a D.O.T. approved motorcycle helmet.
- Secure long hair and loose clothing.
- Wear protective eye wear and clothing.
- Keep arms, legs and feet inside kart.
- Do not use alcohol or drugs.

**WARNING!**

- Moving parts can crush and cut.
- Keep hands clear.
- Do not operate with guards removed.

**WARNING!** Seat belt must be worn at all times.

**CAUTION!** This vehicle manufactured for off-road use only. Do not operate on public streets, roads, or highways.




**WARNING!** No Riding



# FEATURES AND CONTROLS

## Component Locations

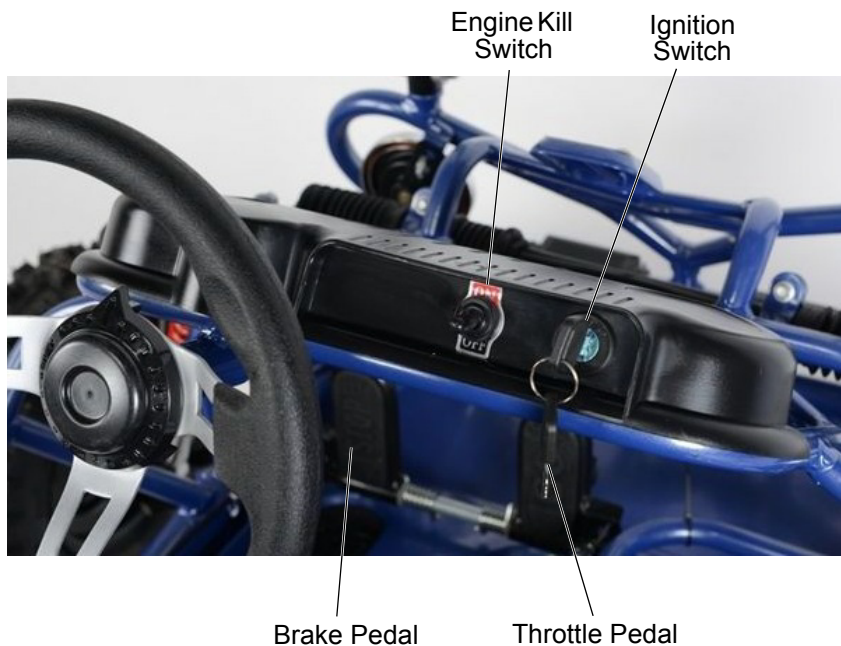

# FEATURES AND CONTROLS

## Seat Belts

This HAMMERHEAD vehicle is equipped with three-point lap and diagonal seat belts for the operator and passenger. Always make sure the seatbelts are secured for both the operator and passenger before riding. To wear the seat belt properly, follow this procedure:

1. Pull the seat belt latch downward across your chest toward the buckle at the inner edge of the seat. The belt should fit snugly across your hips and diagonally across your chest. Make sure the belt is not twisted.
2. Push the latch plate into the buckle until it clicks
3. Release the strap, it will self-tighten.
4. To release the seat belt, press the square button in the buckle's center.

## Seat Belt Inspection

Inspect all seat belts for proper operation before each use of the vehicle.

1. Push latch plates into the buckle until they click. The latch plates must slide smoothly into the buckle. A click indicates that it's securely latched.
2. Push the red release latch in the middle of the buckle to make sure it releases freely.
3. Pull each seat belt completely out and inspect the full length for any damage, including cuts, wear, fraying or stiffness. If any damage is found, or if the seat belt does not operate properly, have the seat belt system checked and/or replaced, Your dealer can assist.
4. To clean dirt or debris from the seat belts, sponge the straps with mild soap and water. Do not use bleach, dye or household detergents. Use a garden hose to flush out the retractor and latch housings regularly.

# FEATURES AND CONTROLS

## Switches

### Engine ON/OFF Switch

The vehicle is equipped with an engine ON/OFF Switch. Toggling the switch to the OFF position shuts down the engine.

Before driving this vehicle, test the Engine ON/OFF Switch to assure that it operates properly. Place the switch in the ON position and follow the starting procedure outline in this manual. Once the engine is running, toggle the Engine ON/OFF Switch to the OFF position and verify the engine shuts down.

### Brake Pedal

Depress the brake pedal to slow or stop the vehicle. Apply the brakes while starting the engine.

### Throttle Pedal

Push the pedal down to increase engine speed. Spring pressure returns the pedal to the rest position when released. Always check that the throttle pedal returns normally before starting the engine. Make sure there's adequate throttle pedal freeplay. See page 53 for throttle pedal adjustment procedures.



Brake Pedal

Throttle Pedal

## Mechanical Speed Control System

The adjustable throttle limiting bolt is located behind the throttle pedal. Use the following procedure to control how far the throttle opens.

1. Loosen the jam nut.
2. Unscrew the bolt to the desired stopping point.
3. Re-tighten the jam nut.

### **⚠ WARNING**

Do not remove the adjustable throttle limiting bolt.

Removal of the throttle limiting bolt could cause throttle cable damage, engine damage, or irregular throttle control.

# FEATURES AND CONTROLS

## Fuel Cap

The fuel tank filler cap is located in the rear of the vehicle, behind the seats.

When refueling, always use unleaded gasoline with a minimum pump octane number of 87 R+M/2 octane. Non-ethanol fuel is recommended. *Do not use fuel with ethanol content greater than 10 percent, such as E-85 fuel.*



# OPERATION

## **⚠ WARNING**

Failure to operate the vehicle properly can result in a collision, loss of control, accident or rollover, which may result in serious injury or death. Read and understand all safety warnings outlined in the safety section of this owner's manual.

## **Vehicle Break-in Period**

The break-in period for your new HAMMERHEAD vehicle is defined as the first five (5) hours of operation.

No single action on your part is as important as a proper break-in period. Careful treatment of a new engine and drive components will result in more efficient performance and longer life for these components. Perform the following procedures carefully.

**NOTICE:** Excessive heat build-up during the first three hours of operation will damage close-fitted engine parts and drive components. Do not operate at full throttle or high speeds during the first three hours of use.

Mixing brands or using a non-recommended oil may cause serious engine damage. Always use the recommended oil. Never substitute or mix oil brands.



## Vehicle Break-in Period

### Engine and Drivetrain Break-in

1. Fill the fuel tank with gasoline. Always exercise extreme caution whenever handling gasoline. See “Refueling” on page 17.
2. Check the oil level. See page 44. Add the recommended oil as needed to maintain the oil level in the safe operating range.
3. Complete the New Operator Driving Procedures outlined on pages 29-30.
4. Avoid aggressive use of the brakes. See Brake System Break-in below.
5. Vary throttle positions. Do not operate at sustained idle.
6. Perform regular checks on fluid levels, controls and areas outlined on the daily pre-ride inspection checklist. See page 26.
7. Change the engine oil at five (5) hours.
8. Adjust and lubricate the drive chain at five (5) hours.

### Brake System Break-in

Apply only moderate braking force for the first 50 stops. Aggressive or overly forceful braking when the brake system is new could damage brake pads and rotors.

### Centrifugal Clutch with Chain Break-in

A proper break-in of the centrifugal clutch will ensure a longer life and better performance. Break in the clutch by operating at slower speeds during the break-in period as recommended. Avoid aggressive acceleration and high speed operation during the break-in period.

# OPERATION

## Pre-Ride Inspection

Failure to inspect and verify that the vehicle is in safe operating condition before operating increases the risk of an accident. Always inspect the vehicle before each use to make sure it's in safe operating condition.

Item	Remarks	Page
Brake system/pedal travel	Ensure proper operation	22 54
Brake fluid	Ensure proper level	65
Front suspension	Inspect, lubricate if necessary	43
Rear suspension	Inspect, lubricate if necessary	43
Steering	Ensure free operation	55
Tires	Inspect condition and pressure	19 56
Wheels/fasteners	Inspect, ensure fastener tightness	57
Frame nuts, bolts, fasteners	Inspect, ensure tightness	-
Fuel and oil	Ensure proper levels	25 44
Grass and debris	Remove grass and debris from the vehicle, especially on the underside and near the exhaust system	-
Throttle	Ensure proper operation	52
Indicator lights/switches	Ensure proper operation	-
Air filter	Inspect and clean or replace	51
Daytime running lights	Ensure proper operation	70
Brake light	Ensure proper operation	-
Seat Latches	Move the seats forward and rearward to ensure correct installation	21
Seat Belts	Check length of belt for damage, check latches for proper operation	22

## Safe Operation Practices

1. Visit the Recreational Off-Highway Vehicle Association web site ([rohva.org](http://rohva.org)) and take the free on-line training course. Complete the recommended safety training before operating this vehicle.
2. Do not allow anyone under 6 to operate this vehicle.
3. Never operate with a passenger under the age of 6. Never carry more one passenger in a 2-seat vehicle. Never allow a passenger to ride in the cargo box.
4. Engine exhaust fumes are poisonous. Never start the engine or let it run in an enclosed area.
5. Never operate with accessories not approved by HAMMERHEAD for use on this vehicle.
6. Operate this vehicle off-road only. Never operate the vehicle on pavement or on any public street, road or highway, including dirt and gravel roads.
7. Drive in a manner appropriate for your skills and operating conditions. Never operate at excessive speeds. Never attempt wheelies, jumps, or other stunts. Keep both hands on the steering wheel during operation.
8. Never consume alcohol or drugs before or while operating this vehicle.
9. Always use the size and type of tires specified for your vehicle. Always maintain proper tire pressure.
10. Never operate a damaged vehicle. After any rollover or accident, have a qualified service dealer inspect the entire machine for possible damage.
11. Never operate the vehicle on a frozen body of water unless you have first verified that the ice is sufficiently thick to support the weight and moving force of the vehicle, you and your passenger, and your cargo, together with any other vehicles in your party.
12. Do not touch hot exhaust system components. Always keep combustible materials away from the exhaust system.
13. Always remove the ignition key when the vehicle is not in use to prevent unauthorized use.

# OPERATION

## Starting the Engine

This vehicle is pull start only. To start the vehicle:

1. Insert the key into the ignition switch and turn the key to the "ON" position.
2. Flip the toggle switch to the "ON" position.
3. Go to the back of the engine and switch on the mechanical choke.
4. If the engine is cold, use full choke by pulling the choke all the way out. A warm engine will not require the use of the choke.

**Tip:** The choke is fully on when pushed completely to the right. The choke is fully off when pushed completely to the left. It can be adjusted gradually depending on how much choke is needed for starting.

5. Pull the rope to turn over the engine.
6. Once the engine starts, allow to warm up before operating.  
Operating the vehicle immediately after starting could cause engine damage. Allow the engine to warm up for several minutes before operating the vehicle.

## Stopping the Engine

1. Release the throttle pedal completely and brake to a complete stop.
2. Stop the engine by toggling the "Engine ON/OFF" switch to "OFF" position.
3. Turn key to off position


## Braking

1. Release the throttle pedal completely. (When the throttle pedal is released completely and engine speed slows to near idle, the vehicle has no engine braking.)
2. Press on the brake pedal evenly and firmly. Practice starting and stopping (using the brakes) until you're familiar with the controls.

## Parking the Vehicle


1. Stop the vehicle on a level surface. When parking inside a garage or other structure, be sure that the structure is well ventilated and that the vehicle is not close to any source of flame or sparks, including any appliance with pilot lights.
2. Stop the engine.
3. Remove the ignition key to prevent unauthorized use.

## New Operator Driving Procedures

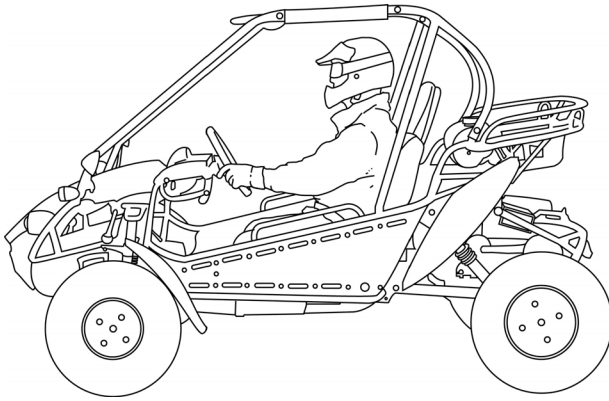

1. Read and understand this owner's manual and all warning and instruction labels before operating this vehicle.
2. Visit the Recreational Off-Highway Vehicle Association web site ([rohva.org](http://rohva.org)) and take the free on-line training course. Hands-on training is also available through ROHVA.
3. Review the section of this owner's manual about starting the engine, stopping the engine, braking and parking (pages 28-28).
4. Perform the pre-ride inspection (page 26).
5. The driver and passenger must wear helmet, eye protection, gloves, long-sleeve shirt, long pants, over-the-ankle boots and seat belt at all times.
6. Do not operate or ride in this vehicle if the clearance between the top of your helmet and brush bar is less than 2 inches (5 cm).

*(continued on next page)*

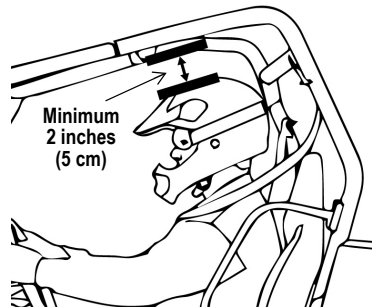

# OPERATION

## New Operator Driving Procedures

7. Select a level open area to practice driving. Make sure you have permission to drive in this area.
8. Make sure all passengers secure their seat belts.
9. Do not carry a passenger until you have at least four hours of driving experience with this vehicle. See page 31.
10. Start the engine. See “Starting the Engine” on page 28.
11. Check your surroundings. Make sure the area is clear of people and obstacles.
12. Keeping both hands on the steering wheel, slowly release the brakes and press the throttle with your right foot to begin driving.
13. Drive slowly at first. Practice starting, stopping, turning, using the throttle and brakes. Learn how the vehicle handles when making both left and right turns at a slow speed.
14. Increase speed only after mastering all maneuvers at a slow speed.
15. After you become skilled at making turns and begin to operate at faster speeds, follow these precautions:
  - Avoid sharp turns. Make turns gradually.
  - Never turn while applying heavy throttle.
  - Never turn the steering wheel abruptly.
  - Operate at speeds appropriate for your skills, the conditions and the terrain.
  - DO NOT attempt to do power slides, “donuts”, jumps or other driving stunts.

## Driving with a Passenger

1. Complete the New Operator Driving Procedures outlined on pages 29-30.
2. Perform the pre-ride inspection. See page 26.
3. Do not carry a passenger until you have at least four hours of driving experience with this vehicle.
4. Make sure the passenger is at least 6 years of age. All riders must be able to sit with backs against the seat, both feet flat on the floor and both hands on the steering wheel (if driving) or on a passenger hand hold.
5. Make sure the passenger has at least 2 inches (5 cm) of clearance between his helmet and the brush bars.
6. Never carry more than one passenger in this vehicle.
7. Never allow a passenger to ride on the back of the vehicle. Allow a passenger to ride only in the passenger seat.
8. Make sure the passenger is wearing helmet, eye protection, gloves, long-sleeve shirt, long pants and over-the-ankle boots. See page 8.
9. Make sure the passenger secures the seat belt.
10. Tell your passenger to always keep hands and feet inside the vehicle at all times.
11. Drive slowly. Vehicle handling may change with a passenger on board. Always travel at a speed appropriate for your skills, your passenger's skills, and operating conditions. Avoid unexpected or aggressive maneuvers that could cause discomfort or injury to a passenger.
12. Always follow all operating guidelines as outlined on safety labels and in this manual.


# OPERATION

## Driving on Slippery Surfaces

When driving on slippery surfaces such as wet trails, loose gravel, sand or ice, be alert for the possibility of skidding and sliding.

Follow these precautions when driving in slippery conditions:

1. Slow down before entering slippery areas.
2. Be alert, watch the path ahead and avoid quick turns, which can cause skids.
3. Correct a skid by turning the steering wheel in the direction of the skid. *Never apply the brakes during a skid.*

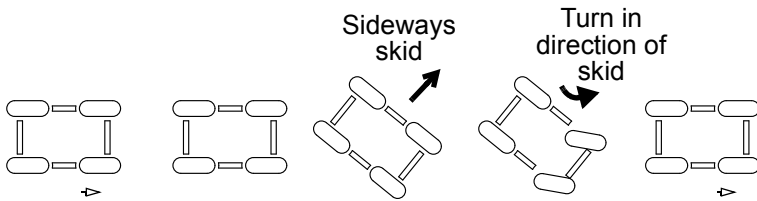




## Driving Uphill

Whenever traveling uphill, follow these precautions:

1. Always check the terrain carefully before ascending a hill. Never drive on hills with excessively slippery or loose surfaces.
2. Avoid excessively steep hills (15° maximum).
3. Drive straight uphill.
4. Drive at a steady rate of speed. Never press the throttle suddenly.
5. Avoid unnecessary changes in speed or direction.
6. Never go over the crest of a hill at a high speed. An obstacle, a sharp drop, or another vehicle or person could be on the other side of the hill.
7. If the vehicle stalls while climbing a hill, apply the brakes. Place the transmission in reverse and slowly allow the vehicle to roll straight downhill while applying the brakes lightly to control speed.

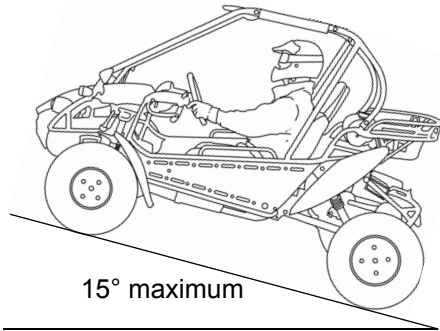

## OPERATION

### Driving on a Sidehill (Sidehilling)

Driving on a sidehill is not recommended. Driving on a sidehill improperly cause loss of control or rollover.

If crossing a hill is *unavoidable*, follow these precautions:

1. Drive slowly and use extreme caution.
2. If the vehicle begins to roll over, or if it feels as if it may roll over, *immediately* turn downhill.
3. Avoid obstacles and changes in terrain that may lower or raise one side of the vehicle or cause the vehicle to slide.
4. If the vehicle begins to slide downhill, immediately turn downhill to stop the slide, or stop the vehicle and maneuver slowly and carefully until the vehicle can be driven straight downhill.

### Driving Downhill

Whenever driving down a hill, follow these precautions:

1. Avoid excessively steep hills (15° maximum).
2. Slow down. Never travel down a hill at high speed.
3. Always check the terrain carefully before driving down a hill. Never drive on hills with excessively slippery or loose surfaces.
4. Always drive down a hill with the transmission in forward gear. *Never “coast” or drive down a hill with the transmission in neutral.*
5. Avoid driving down a hill at an angle, which would cause the vehicle to lean sharply to one side. Always drive straight downhill.
6. Apply the brakes *lightly* to keep speed slow.

## Driving Through Water

Your vehicle can drive through shallow water. Make sure the water is no deeper than the floor of the vehicle. Follow these precautions when driving through water:

1. Check water depth. Never drive through water that is deeper than the floor level.
2. After driving through water, test the brakes. Apply them lightly several times while driving slowly. The friction will help dry out the pads.

**NOTICE:** Major engine damage can result if the vehicle is not thoroughly inspected after operation in water. Perform the services outlined in the maintenance chart. See page 38. Give special attention to engine oil, transmission oil and all grease fittings.


If your vehicle becomes immersed or is operated in water that exceeds the floor level, *service is required before starting the engine*. Your HAMMERHEAD dealer can provide this service. If it's impossible to bring the vehicle in before starting the engine, perform the service outlined on page 58, and take the vehicle in for service at the first opportunity.

## Parking on an Incline

A rolling vehicle can result in serious injury. Avoid parking on an incline.

# OPERATION

## Driving Over Obstacles

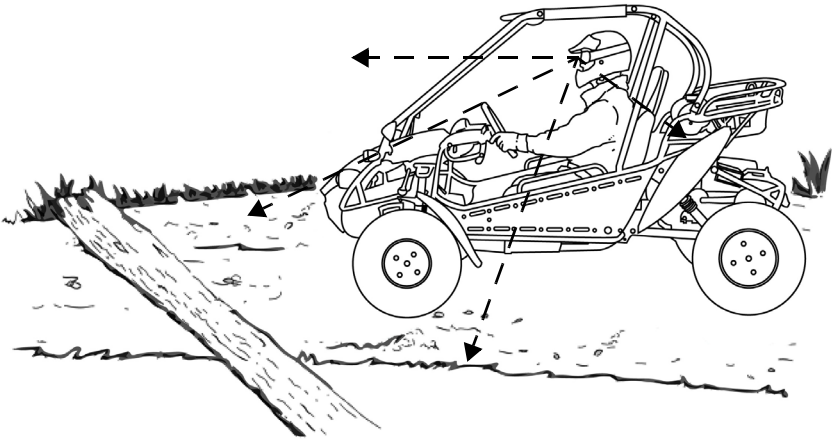

Follow these precautions when driving over obstacles:

1. Always check for obstacles before driving in a new area.
2. Look ahead and watch the terrain. Always be alert for hazards such as logs, rocks and low hanging branches.
3. Drive slowly and use extra caution when driving on unfamiliar terrain. Obstacles are not always clearly visible.
4. Do not drive over large obstacles such as large rocks and fallen trees. If it's unavoidable, use extreme caution and drive slowly.
5. Always have a passenger dismount and move away from the vehicle before driving over an obstacle that could cause a rollover.

# **EMISSION CONTROL SYSTEMS**

## **Noise Emission Control System**

Do not modify the engine, intake or exhaust components, as doing so may affect compliance with U.S.A. EPA noise control requirements and local noise level requirements.

## **Crankcase Emission Control System**

This engine is equipped with a closed crankcase system. Blow-by gases are forced back to the combustion chamber by the intake system. All exhaust gases exit through the exhaust system.

# MAINTENANCE

## Periodic Maintenance Chart

Any qualified repair shop or person may maintain, replace or repair the emission control devices or systems on your vehicle. An authorized HAMMERHEAD dealer can perform any service that may be necessary for your vehicle. HAMMERHEAD also recommends HAMMERHEAD parts for emissions-related service, however equivalent parts can be used.

It is a potential violation of the Clean Air Act if a part supplied by an aftermarket parts manufacturer reduces the effectiveness of the vehicle's emission controls. Tampering with emission controls is prohibited by federal law.

Owners are responsible for performing the scheduled maintenance identified in this owner's manual.

Careful periodic maintenance will help keep your vehicle in the safest, most reliable condition. Inspection, adjustment and lubrication of important components are explained in the periodic maintenance chart.

Inspect, clean, lubricate, adjust and replace parts as necessary. When inspection reveals the need for replacement parts, genuine HAMMERHEAD parts are available from your HAMMERHEAD dealer. Equivalent parts may be used for emissions-related service.

Record maintenance and service in the Maintenance Log beginning on page 76.

Service and adjustments are important for proper vehicle operation. If you're not familiar with safe service and adjustment procedures, a qualified dealer can perform these operations.

Vehicles subjected to heavy or severe use patterns must be inspected and serviced more frequently.

### Severe Use Definition

- Frequent immersion in mud, water or sand
- Racing or race-style high RPM use
- Prolonged low speed operation
- Extended idle
- Short trip cold weather operation

Pay special attention to the oil level. A rise in oil level during cold weather can indicate contaminants collecting in the oil sump or crankcase. Change oil immediately if the oil level begins to rise. Monitor the oil level, and if it continues to rise, discontinue use and determine the cause. Your HAMMERHEAD dealer can assist.

## Periodic Maintenance Chart Maintenance Chart Key

Symbol	Description
▶	Perform these operations more often for vehicles subjected to severe use.
D	Have an authorized HAMMERHEAD dealer or other qualified person perform these services.

**WARNING!** Improperly performing the procedures marked with a “D” could result in component failure and lead to serious injury or death. Have an authorized HAMMERHEAD dealer or other qualified person perform these services.

# MAINTENANCE

## Periodic Maintenance Chart

Perform all services at whichever maintenance interval is reached first.

Item	Maintenance Interval (whichever comes first)			Remarks
	Hours	Calendar	Miles (Km)	
Steering	-	Daily	-	Check each day before driving the vehicle. Make adjustments as needed. See the Pre-Ride Checklist on page 26.
Front suspension	-		-	
Rear suspension	-		-	
Tires	-		-	
Brake pedal travel	-		-	
Brake system	-		-	
Wheels/fasteners	-		-	
Frame fasteners	-		-	
Engine oil level	-		-	
Fuel Tank		Daily		Add Carbon Clean with each fuel fill
▶ Air filter	-	Daily	-	Inspect; clean often; replace as needed
Airbox Sediment Tube		Daily		Drain when deposits are visible
Daytime running lights/taillight	-	Daily	-	Check operation
Drive chain	-	Daily	-	Inspect; adjust, lubricate, replace as needed
Centrifugal Clutch housing (if equipped)	-	Weekly	-	Drain water as needed, check often if driving in wet conditions
▶ D Brake pad wear	10	Monthly	100 (160)	Inspect periodically
D Choke (if equipped)	10	Monthly	100 (160)	Check for proper operation; your dealer can assist
Idle Speed	10	Monthly	100 (160)	Check, adjust as needed
Valve Clearance (Initial)	10	Monthly	100 (160)	Valve lash adjustment: Every 40 hours after first 10 hour adjustment
▶ Engine oil change (break-in)	5	Monthly	-	Perform a Break-in Oil Change at one month
Drive chain (break-in)	5	Monthly	-	Adjust and lubricate

▶ Perform these procedures more often for vehicles subjected to severe use.  
 D Have an authorized HAMMERHEAD dealer or other qualified person perform these services.



# MAINTENANCE

## Periodic Maintenance Chart

Item	Maintenance Interval (whichever comes first)			Remarks
	Hours	Calendar	Miles (Km)	
▶ Main gearcase oil	25	Monthly	250 (400)	Inspect level; change yearly
▶ Engine breather filter (if equipped)	25	1 M	150 (250)	Inspect; replace if necessary
▶ Engine oil change	30	6 M	300 (480)	Change Oil; Use 10w40 (SN) Conventional Engine Oil
▶ General lubrication	50	3 M	500 (800)	Lubricate all fittings, pivots, cables, etc.
Shift Linkage	50	6 M	500 (800)	Inspect, lubricate, adjust
D Steering	50	6 M	500 (800)	Lubricate
▶ Front Suspension	50	6 M	500 (800)	Lubricate
▶ Rear Suspension	50	6 M	500 (800)	Lubricate
D Choke Cable	50	6 M	500 (800)	Inspect; adjust; lubricate; replace if necessary. Your dealer can assist.
Carburetor Float Bowl	50	6 M	500 (800)	Drain bowl periodically, and prior to storage.
Carb Intake Ducts	50	6 M	500 (800)	Inspect duct for proper sealing/air leaks
D Valve Clearance	50	-	500 (800)	Adjust valve lash every 40 hours after first 10 hours
D Fuel system/filter	100	12 M	600 (1000)	Inspect; Clean/Replace if necessary. Check for leaks at tank cap, filter, and carburetor.
▶ Spark plug	100	12M	600 (1000)	Check, Replace as necessary, torque to specification

▶ Perform these procedures more often for vehicles subjected to severe use.

D Have an authorized HAMMERHEAD dealer or other qualified person perform these services.

# MAINTENANCE

## Periodic Maintenance Chart

Item		Maintenance Interval (whichever comes first)			Remarks
		Hours	Calendar	Miles (Km)	
▶	Engine mounts	100	12 M	1000 (1600)	Inspect
	Exhaust muffler/ pipe	100	12 M	1000 (1600)	Inspect
D	Ignition timing	100	12 M	1000 (1600)	Inspect
▶	Wiring	100	12 M	1000 (1600)	Inspect for wear, routing, security; apply dielectric grease to connectors subjected to water, mud, etc.
D	Clutches (drive and driven)	100	12 M	1000 (1600)	Inspect; clean; replace worn parts
	Drive belt	100	12 M	1000 (1600)	Inspect; replace as needed
D	Front wheel bearings	100	12 M	1000 (1600)	Inspect; replace as needed
	Spark arrester	300	36 M	3000 (4800)	Clean out
D	Toe adjustment	-			Inspect periodically; adjust when parts are replaced

- ▶ Perform these procedures more often for vehicles subjected to severe use.
- D Have an authorized HAMMERHEAD dealer or other qualified person perform these services.

# MAINTENANCE

## Lubrication Recommendations

Check and lubricate all components at the intervals outlined in the Periodic Maintenance Chart beginning on page 38, or more often under severe use, such as wet or dusty conditions. Items not listed in the chart should be lubricated at the general lubrication interval.

Item	Lube	Method
Engine Oil	10w30 Conventional Engine Oil	See page 44.
Drive Chain	Chain Lube or SAE 80/90	See page 46.
A-Arm Pivots	All Season Grease or grease conforming to NLGI No. 2	Grease at general lubrication interval, also after washing vehicle or driving in water.
▶ Steering Arm Pivots		

▶ Perform these procedures more often for vehicles subjected to severe use.

# MAINTENANCE

## Engine Oil

### Oil Recommendations

Always check and change the engine oil at the intervals outlined in the Periodic Maintenance Chart beginning on page 38. HAMMERHEAD recommends the use of 10w40 Conventional Engine Oil for this vehicle.

**NOTICE:** Mixing brands or using a non-recommended oil may cause serious engine damage. Always use the recommended oil. Never substitute or mix oil brands.

### Oil Check

Check the engine oil level with the engine stopped and with the engine in a level position.

1. Remove either side mounted filler cap dipstick or high oil fill dipstick and wipe it clean.
2. Insert the dipstick into the filler neck and turn clockwise until fully seated. Then remove the dipstick by turning it counter-clockwise. Check the oil level shown on the dipstick.
3. If the oil level is low, fill to the edge of the oil filler hole with the recommended oil.

Securely screw in the filler cap/dipstick. Running the engine with a low oil level can cause engine damage. Always check the engine oil before start up.

## Engine Oil Oil Change

Drain the used oil while the engine is warm. Warm oil drains quickly and completely. Avoid contact with hot oil.

1. Place a suitable container below the engine to catch the used oil then remove the filler cap/dipstick and the drain plug.
2. Allow the used oil to drain completely, then reinstall the drain plug, and tighten it securely. Do not over tighten. Dispose of used motor oil in a manner that is compatible with the environment. We suggest you take used oil in a sealed container to your local recycling center or service station for reclamation. Do not throw used oil in the trash, pour it on the ground, or pour down a drain.
3. With the engine in a level position, fill to the marks on the dipstick with the recommended oil.

**NOTICE:** Running the engine with a low oil level can cause engine damage.

4. Securely screw in the filler cap/dipstick.

**NOTE:** Engine Oil Capacity: 136cc - 16 oz (.473 liter)

# MAINTENANCE

## Drive Chain Lubrication


Lubricate the drive chain with chain spray lube or an approved chain lube at the general lubrication interval specified in the Periodic Maintenance Chart beginning on page 38. Lubricate more often under severe use, such as in dirty or wet conditions.

**NOTICE:** Washing the drive chain with a high pressure washer or gasoline can cause premature wear and drive chain failure. Don't use a high pressure washer or gasoline to clean the drive chain.

Adjusting or operating the vehicle with improper rear drive chain slack can result in severe damage to the transmission and drive components. Always make sure the slack is within the stated specifications.

## Drive Chain Slack Adjustment

1. Loosen upper nut.
2. Turn lower nut clockwise in 1/2 turn increments, then turn upper nut until tight. Follow this procedure until chain is at proper tension. Chain should have 1/4" to 1/2" deflection.
3. Repeat the above steps until chain is adjusted to desired fit.

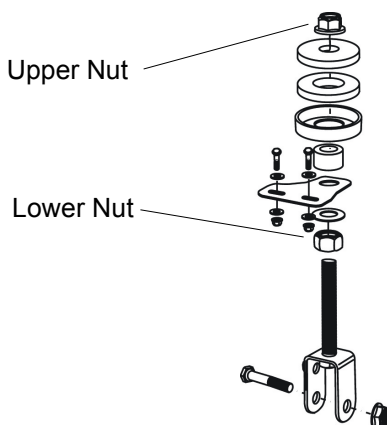


## Spark Plug Spark Plug Gap/Torque

<b>Electrode Gap</b>
.027 - .030 inches

**NOTICE:** Using non-recommended spark plugs can result in serious engine damage. Use HAMMERHEAD-recommended spark plugs or their equivalent. See page 80.

Spark plug condition is indicative of engine operation. The spark plug firing end condition should be read after the engine is warmed up and the vehicle is driven at higher speeds. Immediately check the spark plug for correct color. See page 47.

 A hot exhaust system and engine can cause burns. Wear protective gloves when removing a spark plug for inspection.

## Spark Plug Condition Normal Plug

The normal insulator tip is gray, tan or light brown. There will be few combustion deposits. The electrodes are not burned or eroded. This indicates the proper type and heat range for the engine and the service.

**Tip:** The tip should not be white. A white insulator tip indicates overheating, caused by use of an improper spark plug or incorrect throttle body adjustments.

## Wet Fouled Plug

The wet fouled insulator tip is black. A damp oil film covers the firing end. There may be a carbon layer over the entire nose. Generally, the electrodes are not worn. General causes of fouling are excessive oil, use of non-recommended injection oil or incorrect throttle body adjustments.

# MAINTENANCE

## Spark Plug


### Spark Plug Removal and Replacement

1. Use a spark plug wrench to remove the spark plug.
2. Inspect the spark plug each time you change the oil. The electrodes should be kept clean and free of carbon. The presence of carbon or excess oil will reduce proper engine performance. If possible, check the spark plug gap (area between electrodes) using a wire feeler gauge.
3. Install the spark plug carefully to avoid cross threading. Screw in spark plug by hand until it stops turning.
4. Tighten the spark plug with a 13/16-inch spark plug wrench. Tighten 1/4 turn after the spark plug seats.

**NOTICE:** Using an incorrect spark plug may cause engine damage.

**NOTICE:** A loose spark plug can overheat and damage the engine. Over-tightening the spark plug can damage the threads in the cylinder head.

**NOTE:** It is advisable to replace the spark plug at least once a year to insure easy starting and good engine performance.

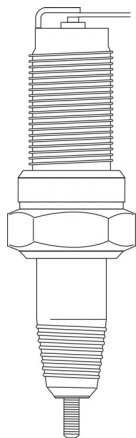



## Valve Adjustment Procedure

**NOTE:** In order to properly set the valves, the engine must be at TDC on the compression stroke. To find TDC on the compression stroke, roll the engine over until the intake valve closes and stop at TDC.

### Intake Valve Clearance Adjustment

1. Remove the valve cover and secondary air pipr assembly.
2. Verify cam lobes are pointed down.
3. Insert correct thickness feeler gauge between end of intake valve stem and adjuster screw.
4. When clearance is correct, hold adjuster screw and tighten locknut securely.
5. Re-check the valve clearance.

Repeat adjustment procedure if necessary until clearance is correct with locknut secured.

#### MEASUREMENT

Valve Clearance  
0.004" (0.10 mm)

---

### Exhaust Valve Clearance Adjustment

1. Remove the valve cover and secondary air pipr assembly.
2. Verify cam lobes are pointed down.
3. Insert correct thickness feeler gauge between end of exhaust valve stem and adjuster screw.
4. Loosen locknut and turn adjuster screw until there is a slight drag on feeler gauge.
5. When clearance is correct, hold adjuster screw and tighten locknut securely,
6. Re-check the valve clearance.
7. Repeat adjustment procedure if necessary until clearance is correct with locknut secured.

#### MEASUREMENT

Valve Clearance  
0.0047" (0.12 mm)

---

8.

# MAINTENANCE

## Centrifugal Clutch with Chain System

### **WARNING**

Failure to comply with the instructions in this warning can result in severe injury or death.

Do not modify any component of the Centrifugal Clutch with Chain system. Doing so may reduce its strength so that a failure may occur at a high speed. The Centrifugal Clutch with Chain system has been precision balanced. Any modification will cause the system to be out of balance, creating vibration and additional loads on components.

The Centrifugal Clutch with Chain system rotates at high speeds, creating large amounts of force on clutch components. Extensive engineering and testing has been conducted to ensure the safety of this product. However, as the owner, you have the following responsibilities to make sure this system remains safe:

- Always follow all recommended maintenance procedures. See your HAMMERHEAD dealer, or other qualified person, for service and repair assistance.
- This Centrifugal Clutch with Chain system is intended for use on HAMMERHEAD products only. Do not install it in any other product.
- Always make sure the Centrifugal Clutch with Chain system housing is securely in place during operation.

### Centrifugal Clutch with Chain System Drying

There may be some instances when water is accidentally ingested into the Centrifugal Clutch with Chain system. Use the following instructions to dry it out before operating.

1. Shift the transmission to neutral. Set the parking brake.
2. Start the engine. Apply varying throttle for 10-15 seconds to expel the moisture and air-dry the clutches. Do not hold the throttle wide open for more than 10 seconds.
3. Allow the engine RPM to settle to idle speed.
4. Your vehicle requires service as soon as possible. Your HAMMERHEAD dealer can assist.

Exposure to salt water will cause corrosion to metal components. If your vehicle is operated in salt water areas, rinse it off frequently with fresh water.

## Filter System


### Air Filter

This unit is equipped with a foam-style air filter and should be replaced after every 20 hours of operating.


**NOTE:** Operating in usually dusty conditions may require more frequent replacement.

1. Remove air filter and cover by releasing the tab
2. Clean any excess dirt, oil, or dust from the air cleaner box with a mild detergent and water solution.
3. Thoroughly dry the air box.
4. Replace the air filter element.
5. Replace the cleaner cover.

Air Filter Cover

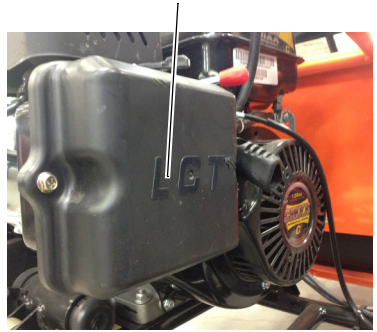

Air Filter Element

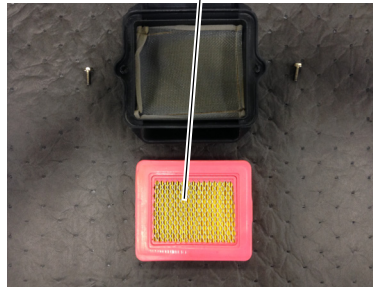

# MAINTENANCE

## Throttle System

### **⚠ WARNING**

Failure to check or maintain proper operation of the throttle system can result in an accident and lead to serious injury or death if the throttle pedal sticks during operation.

Never start or operate this vehicle if it has a sticking or improperly operating throttle pedal. Immediately contact your HAMMERHEAD dealer or other qualified person for service if throttle problems arise. Always check the pedal for free movement and return before starting the engine and occasionally during operation.

### Throttle Freeplay

If the throttle pedal has excessive play due to cable stretch or misadjustment, it will cause a delay in throttle response, especially at low engine speed. The throttle may also not open fully. If the throttle pedal has no freeplay, the throttle may be hard to control, and the idle speed may be erratic.

Check the throttle pedal freeplay at the intervals outlined in the Periodic Maintenance Chart beginning on page 38. Adjust the freeplay if necessary.



Brake  
Pedal

Throttle  
Pedal

### Throttle Freeplay Inspection



1. Start the engine. Allow it to warm up thoroughly.
2. Measure the distance the throttle pedal moves before the engine begins to pick up speed.

## Throttle System

### Throttle Freeplay Adjustment

Access the throttle cable adjuster through the right front wheel well.

1. Slide the cable adjuster boot off the cable adjuster.
2. Squeeze the end of the rubber boot and slide it far enough to expose the end of the in-line cable adjuster.
3. Loosen the adjuster lock nut.
4. Move the cable adjuster until desired freeplay is achieved at the throttle pedal. See page 52. While adjusting, lightly flip the throttle pedal up and down.
5. Tighten the lock nut.
6. Apply a small amount of grease to the inside of the boot and slide it over the cable adjuster to its original position.

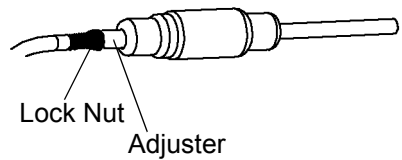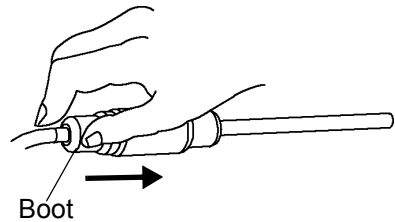

# MAINTENANCE

## Brakes

The rear brake is a mechanical disc type brakes activated by the brake pedal. See page 27.


Always check brake pedal travel before each use of the vehicle. When applied, the brake pedal should feel firm.

If you discover any irregularities in brake system operation, including excessive pedal travel, contact your dealer for proper diagnosis and repairs.


### Brake Inspection

1. Check the brake pads for wear, damage and looseness.
2. Inspect the brake pad wear surface for excessive wear.
3. Change pads when the friction material is worn to 0.04" (1 mm).
4. Check the surface condition of the brake discs. Measure the thickness of the front and rear discs. Replace a disc if the thickness is less than 1" (2.5 mm).

Brake Pad

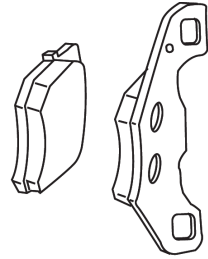

Rear Disc

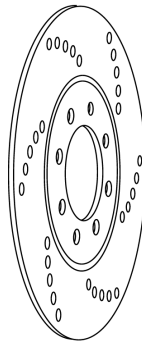

## Steering Wheel Inspection

Check the steering wheel for specified freeplay and smooth operation at the intervals outlined in the Periodic Maintenance Chart beginning on page 38.

1. Position the vehicle on level ground.
2. Lightly turn the steering wheel left and right.
3. If there is excessive freeplay or strange noises, or the steering feels rough or “catchy,” have the steering system inspected by an authorized HAMMERHEAD dealer or other qualified service facility before operating the vehicle.

# MAINTENANCE

## Tires


### **⚠ WARNING**

Operating your vehicle with worn tires will increase the possibility of skidding, loss of control and an accident, which could result in serious injury or death. Always replace tires when the tread depth measures 1/8" (3 mm) or less.

Improper tire inflation or the use of non-standard size or type of tires may adversely affect vehicle handling, which could result in vehicle damage or personal injury. Always maintain proper tire pressure. Always use HAMMERHEAD-approved size and type of tires for this vehicle when replacing tires.

### **Tire Tread Depth**

Always replace tires when tread depth is worn to 1/8" (3 mm) or less.

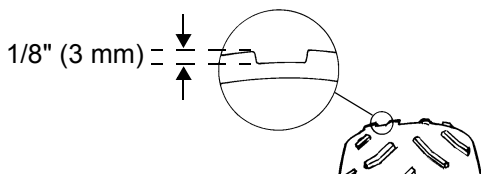


### **Front Wheel Hub Tightening**

Front wheel bearing tightness and spindle nut retention are critical component operations. All service must be performed by your authorized HAMMERHEAD dealer or other qualified service facility.

### **Front Wheel Replacement**

1. Position the vehicle on a level surface.
2. Loosen the castle nut slightly.
3. Elevate the side of the vehicle by placing a suitable stand under the frame.
4. Remove the castle nut.
5. Remove the wheel.
6. Reverse steps to install.

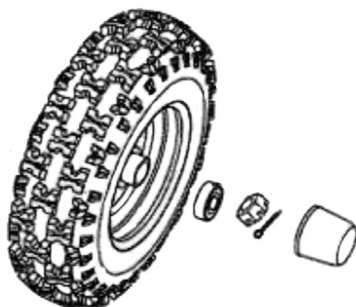




## Tires

### Rear Wheel Replacement

1. Position the vehicle on a level surface.
2. Stop the engine.
3. Remove the cotter pin and then 14mm nut.
4. Slide off wheel and hub assembly.

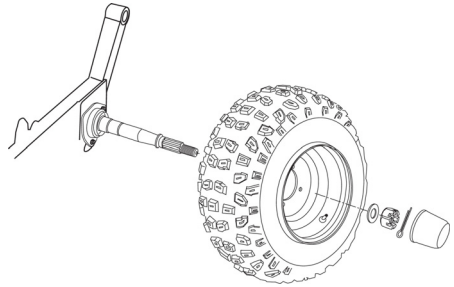

**!** Improperly installed wheels can adversely affect tire wear and vehicle handling, which can result in serious injury or death. Always ensure that all nuts are torqued to specification. Do not service axle nuts that have a cotter pin installed. Your HAMMERHEAD dealer can assist.

### Wheel Nut Torque Specifications

Check the wheel nut torques occasionally and when they've been loosened for service.

Location	Nut Torque
Front Wheel	71 +/- 11 ft. lbs (96 +/- 15 NM)
Rear Wheel	71 +/- 11 ft. lbs (96 +/- 15 Nm)

# MAINTENANCE

## Vehicle Immersion

**NOTICE:** If your vehicle becomes immersed, major engine damage can result if the machine is not thoroughly inspected. Take the vehicle in for service before starting the engine. Your HAMMERHEAD dealer can assist.

If it's impossible to take your vehicle to a dealer before starting it, follow the steps outlined below.

1. Move the vehicle to dry land.
2. Check the air box. If water is present, dry the air box and replace the filter with a new filter. Thoroughly dry the air pre-filter. See page 51.
3. Remove the air box drain plug to drain any water. Reinstall the drain plug securely.
4. Remove the spark plug.
5. Loosen carburetor drain screw.
6. Turn the engine over several times using the electric start.
7. Re-tighten the carburetor drain screw.
8. Dry the spark plug and reinstall it, or install a new plug.
9. Attempt to start the engine. If necessary, repeat the drying procedure.
10. Take the vehicle in for service as soon as possible, whether you succeed in starting it or not. Your HAMMERHEAD dealer can provide the required service.
11. If water has been ingested into the transmission follow the procedure on page 50 for drying.

## Cleaning and Storage

### Washing the Vehicle

Keeping your HAMMERHEAD vehicle clean will not only improve its appearance but it can also extend the life of various components.

**NOTICE:** High water pressure may damage components. HAMMERHEAD recommends washing the vehicle by hand or with a garden hose, using mild soap.

Certain products, including insect repellents and chemicals, will damage plastic surfaces. Do not allow these types of products to contact the vehicle.

The best and safest way to clean your HAMMERHEAD vehicle is with a garden hose and a pail of mild soap and water.

1. Use a professional-type washing cloth, cleaning the upper body first and the lower parts last.
2. Rinse with clean water frequently.
3. Dry surfaces with a chamois to prevent water spots.

### Washing Tips

- Avoid the use of harsh cleaners, which can scratch the finish.
- Do not use a power washer to clean the vehicle.
- Do not use medium to heavy duty compounds on the finish.
- Always use clean cloths and pads for cleaning and polishing. Old or reused cloths and pads may contain dirt particles that will scratch the finish.

# MAINTENANCE

## Cleaning and Storage

### Washing the Vehicle

If a high pressure water system is used for cleaning (not recommended), exercise extreme caution. The water may damage components and could remove paint and labels. Avoid directing the water stream at the following items:

- Wheel bearings
- Radiator
- Transmission seals
- Centrifugal Clutch with Chain inlet and outlet ducts
- Brakes
- Cab and body panels
- Labels and decals
- Electrical components and wiring

If an informational or graphic label becomes illegible or comes off, contact your HAMMERHEAD dealer to purchase a replacement. Replacement *safety* labels are provided by HAMMERHEAD at no charge.

Grease all zerk fittings immediately after washing. Allow the engine to run for a while to evaporate any water that may have entered the engine or exhaust system.

### Polishing the Vehicle

HAMMERHEAD recommends the use of common household aerosol furniture polish for polishing the finish on your HAMMERHEAD vehicle. Follow the instructions on the container.

#### Polishing Tips

- Avoid the use of automotive products, some of which can scratch the finish of your vehicle.
- Always use clean cloths and pads for cleaning and polishing. Old or reused cloths and pads may contain dirt particles that will scratch the finish.

## Cleaning and Storage

### Chrome Wheel Care (if equipped)

Proper maintenance will protect chrome wheels from corrosion, preserve wheel life and ensure a “like new” appearance for many years.

**Tip:** Chrome wheels exposed to road salt (or salt in the air in coastal areas) are more susceptible to corrosion if not properly cleaned. Clean chrome wheels more often if they're exposed to salt or other corrosive elements.

1. Wash chrome wheels frequently. Use a mild detergent. Never use abrasive cleaners on plated or painted surfaces.
2. Rinse well with clear water. Soap, detergents, salt, dirt, mud and other elements can cause corrosion.
3. Polish the clean chrome wheels periodically. Use an automotive grade chrome polish.
4. Routinely and liberally apply a weather resistant wax to each polished chrome wheel. Choose a product suitable for chrome finishes. Read and follow the product labels and instructions.

### Removing Corrosion

If light rust is found on the chrome finish, use steel wool (#0000-OTT grade) to remove it. Gently rub the affected areas with the steel wool until the corrosion has been removed. Clean and polish the wheel as outlined above.

# **MAINTENANCE**

## **Cleaning and Storage**

### **Storage Tips**

**NOTICE:** Starting the engine during the storage period will disturb the protective film created by fogging and damage could occur. Never start the engine during the storage period.

### **Clean the Exterior**

Make any necessary repairs and clean the vehicle as recommended. See page 59.

### **Stabilize the Fuel**

1. Fill the fuel tank.
2. Add Carbon Clean Fuel Treatment or equivalent fuel treatments or stabilizers. Follow the instructions on the container for the recommended amount. Carbon Clean removes water from fuel systems, stabilizes fuel and removes carbon deposits from pistons, rings, valves and exhaust systems.
3. Allow the engine to run for 15-20 minutes in a well ventilated area to allow the stabilizer to disperse through the entire fuel delivery system.

### **Air Filter / Air Box**

Inspect and clean or replace the air filter. See page 51. Clean the air box. Drain the sediment tube.

### **Fluid Levels**

Inspect the fluid levels. Add or change fluids as recommended in the Periodic Maintenance Chart beginning on page 38.

### **Engine Oil**

Change the oil. See page 45.

## Cleaning and Storage

### Storage Tips

#### Inspect and Lubricate

Inspect all cables and lubricate all areas of the vehicle as recommended in the Periodic Maintenance Chart beginning on page 38.

#### Fog the Engine

1. Treat the fuel system with Carbon Clean or other equivalent fuel treatment. Follow the instructions on the container. Start the engine. Allow it to idle for several minutes so the Carbon Clean reaches the carburetor. Stop the engine.
2. Remove the spark plug and add 2-3 tablespoons of engine oil. To access the plug hole, use a section of clear 1/4" hose and a small plastic squeeze bottle filled with the pre-measured amount of oil.
3. Reinstall the spark plug. Torque to specification. See page 47.
4. Apply dielectric grease to the inside of the spark plug cap. *Do not reinstall the cap onto the plug at this step.*
5. Turn the engine over several times. Oil will be forced in and around the piston rings and ring lands, coating the cylinder with a protective film of fresh oil.
6. If fuel system additive is not used, fuel tank, fuel lines, and injectors should be completely drained of gasoline.
7. Reinstall the spark plug cap to the spark plug.

#### Battery Maintenance

See pages 74-75 for storage and charging procedures.

#### Storage Area/Covers

Be sure the storage area is well ventilated. Do not use plastic or coated materials. They do not allow enough ventilation to prevent condensation, and may promote corrosion and oxidation.

# MAINTENANCE

## Cleaning and Storage

### Removal from Storage

1. Make sure the spark plug is tight.
2. Fill the fuel tank with fuel.
3. Check all the points listed in the Daily Pre-Ride Inspection section on page 26. Tightness of the bolts, nuts and other fasteners should be checked by an authorized HAMMERHEAD dealer or other qualified service facility.
4. Lubricate at the intervals outlined in the Periodic Maintenance Chart beginning on page 38.

## Transporting the Vehicle

Follow these procedures when transporting the vehicle.

1. Place the transmission in neutral. Set the parking brake.
2. Stop the engine.
3. Remove the key to prevent loss during transporting.
4. Secure the fuel cap and seats. Ensure that the seats are attached correctly and are not loose.

**NOTICE:** Always tie the frame of the HAMMERHEAD vehicle to the transporting unit securely with suitable straps or rope. Do not attach tie straps to the front control arm bolt pockets.

5. Wrap the front tie strap through the frame tubes, or attach a tie-down hook around each of the tubes.
6. Wrap the rear tie strap around the swing arm.



# SPECIFICATIONS

<i>Torpedo</i>		
Engine	Engine/Motor Type	4-Stroke
	Displacement	136cc
	Cooling	Air
	Starting	Pull Start
	Fuel System	Carburetor
	Fuel Capacity	0.675 Gal
	Fuel Type	Unleaded 89 Octane
	Engine Oil Capacity	16 Oz
	Engine Oil Type	10W-30
	Spark Plug Type	RF6RTC (Torch)
Drivetrain	Drive/Clutch	Centrifugal Clutch
	Drivetype	2 Wheel Drive
	Transmission/Transaxle	N/A
	Driveline	Chain
Chassis	Front Suspension	Dual A-Arm
	Rear Suspension	Swing Arm
	Steering	Rack & Pinion
	Front Brake	N/A
	Rear Brake	Mechanical Disc
	Seats	Soft Cushion
	Seatbelt	Lap Belt
Dimensions	Body	Brush Guard
	Length	58"
	Width	35"
	Height	43"
	Wheelbase	41.5"
	Distance Seat to Pedal (Front Edge)	17"
Distance Seat to Pedal (Back Seat)	29"	

# SPECIFICATIONS

<b>Torpedo</b>		
Tires	Front Tires	13x4.1-6
	Rear Tires	13x5-6
	Wheels	Steel - Black
	Operating Front Tire Pressure	10 PSI
	Max Front Tire Pressure	20 PSI
	Operating Rear Tire Pressure	10 PSI
	Max Rear Tire Pressure	20 PSI
Capacity	Bed/Rack Capacity	N/A
	Towing Capacity	N/A
	Vehicle Capacity	120 lbs
	Fuse	N/A
	Battery	N/A
Weight	Dry Weight	185

<b>ENGINE TUNE-UP SPECIFICATION</b>	
Idle Mixture	Non-Adjustable
Valve Clearance	.06 mm
Spark Plug	NGK BPR6ES
Spark Plug Gap	0.6 - 0.7 mm
Ignition Timing	Non-Adjustable
Idle Speed	1700 +/- 100 RPM in Neutral
Fuel	Unleaded Gasoline Only 87 (R+M)/2 Octane or Higher
Oil	10W30

# TROUBLESHOOTING

## Engine Doesn't Turn Over Engine Turns Over, Fails to Start

Possible Cause	Solution
Out of fuel	Refuel
Water is present in fuel	Drain the fuel system and refuel
Old or non-recommended fuel	Replace with fresh recommended fuel
Fouled or defective spark plug	Inspect plug and replace if necessary
No spark to spark plug	Inspect plug and replace if necessary
Water or fuel in crankcase	Your HAMMERHEAD dealer can assist.
Clogged fuel filter	Inspect plug and replace if necessary
Mechanical failure	Your HAMMERHEAD dealer can assist.

## Engine Backfires

Possible Cause	Solution
Weak spark from spark plug	Inspect, clean and/or replace spark plug
Incorrect spark plug gap or heat range	Set gap to specs or replace plug
Old or non-recommended fuel	Replace with fresh recommended fuel
Incorrectly installed spark plug wires	Your HAMMERHEAD dealer can assist.
Incorrect ignition timing	Your HAMMERHEAD dealer can assist.
Mechanical failure	Your HAMMERHEAD dealer can assist.
Loose ignition connections	Check all connections and tighten
Water present in fuel	Replace with fresh recommended fuel
Exhaust system leak	Your HAMMERHEAD dealer can assist.

# TROUBLESHOOTING

## Engine Pings or Knocks

Possible Cause	Solution
Poor quality or low octane fuel	Replace with recommended fuel
Incorrect ignition timing	Your HAMMERHEAD dealer can assist.
Incorrect spark plug gap or heat range	Set gap to specs or replace plug

## Engine Runs Irregularly, Stalls or Misfires

Possible Cause	Solution
Fouled or defective spark plug	Inspect, clean and/or replace spark plug
Worn or defective spark plug wires	Your HAMMERHEAD dealer can assist.
Incorrect spark plug gap or heat range	Set gap to specs or replace plug
Loose ignition connections	Check all connections and tighten
Water present in fuel	Replace with new fuel
Clogged fuel cap vent	Inspect and replace
Incorrect fuel	Replace with recommended fuel
Clogged air filter	Inspect and clean or replace
Throttle control malfunction	Your HAMMERHEAD dealer can assist.
Other mechanical failure	Your HAMMERHEAD dealer can assist.

Possible Lean Fuel Cause	Solution
Low or contaminated fuel	Add or change fuel, clean the fuel system
Low octane fuel	Replace with recommended fuel
Clogged fuel filter	Your HAMMERHEAD dealer can assist.
Incorrect fuel	Replace with recommended fuel

Possible Rich Fuel Cause	Solution
Fuel is very high octane	Replace with lower octane fuel
Stopping/starting without adequate warm-up	Allow engine to warm up before operating and/or stopping
Incorrect fuel	Replace with recommended fuel
Clogged air filter	Inspect and clean or replace
Incorrect jetting	
Overuse of choke	

# TROUBLESHOOTING

## Engine Stops or Loses Power

Possible Cause	Solution
Out of fuel	Refuel
Clogged fuel cap vent	Inspect and replace
Water is present in fuel	Replace with new fuel
Fouled or defective spark plug	Inspect, clean and/or replace spark plug
Worn or defective spark plug wires	Your HAMMERHEAD dealer can assist.
Incorrect spark plug gap or heat range	Set gap to specs or replace plug
Loose ignition connections	Check all connections and tighten
Incorrect fuel	Replace with fresh recommended fuel
Clogged air filter	Inspect and clean or replace
Throttle control malfunction	Your HAMMERHEAD dealer can assist.
Other mechanical failure	Your HAMMERHEAD dealer can assist.

# WARRANTY

## Limited Warranty

HAMMERHEAD Inc., 1200 Lakeside Parkway Ste. 400 Flower Mound, TX 75028 (HAMMERHEAD) provides a ONE HUNDRED and EIGHTY DAY PARTS ONLY LIMITED WARRANTY against defects in material or workmanship for all vehicle frames and engines. This PARTS ONLY LIMITED WARRANTY covers parts charges for repair or replacement of defective parts but does not cover any related labor charges or ex-pense.

HAMMERHEAD provides a NINETY DAY PARTS AND LABOR LIMITED WARRANTY against defects in material or workmanship for all other components, except those consumable, general wear, and exposed to friction components referenced in the following paragraph. This NINETY DAY LIMITED WARRANTY covers parts and labor charges for repair or replacement of defective parts.

HAMMERHEAD provides a THIRTY DAY LIMITED WARRANTY against defects in material or workmanship on all consumable components, general wear items, or any parts exposed to friction surfaces, stresses, environmental conditions and/or contamination for which they were not designed or not intended; including but not limited to the following items:

- Wheels and Tires
- Suspension Components
- Brake Components
- Seat Components
- Clutches and Components
- Steering Components
- Batteries
- Light Bulbs/ Sealed Beam Lamps
- Filters
- Lubricants
- Bushings
- Cables
- Finished and Unfinished Surfaces
- Carburetor/Throttle Body Components
- Engine Components
- Drive Belts
- Hydraulic Components and Fluids
- Circuit Breakers/Fuses
- Electronic Components
- Spark Plugs
- Sealants
- Coolants
- Bearings
- Vehicle Tops

This THIRTY DAY LIMITED WARRANTY covers parts and labor charges for repair or replacement of defective parts.

The duration of these warranties may vary by international region based upon local laws and regulations. These warranties begin on the date of purchase by the original retail purchaser.

## Registration

### IMPORTANT!

#### **ALL UNITS MUST BE REGISTERED WITHIN 14 DAYS OF PURCHASE.**

To register your product a copy of the Warranty Registration Form and sales receipt must be forwarded to HAMMERHEAD Off-Road. Your dealer, with your assistance, will complete and forward these items to HAMMERHEAD Off-Road. A copy of the Warranty Registration Card and Buyer Safety Agreement is attached. It is your responsibility to confirm with your dealer within 14 days of purchase that your product has been registered. If you are unable to confirm with your dealer within 14 days of purchase that your product has been registered please contact HAMMERHEAD Off-Road within 14 days of purchase.

# WARRANTY

## Warranty Coverage And Exclusions:

### Limitations Of Warranties And Remedies

This HAMMERHEAD limited warranty excludes any failures that are not caused by a defect in material or workmanship. THIS WARRANTY DOES NOT COVER CLAIMS OF DEFECTIVE DESIGN. This warranty also does not cover acts of God, accidental damage, normal wear and tear, abuse or improper handling. This warranty also does not cover any vehicle, component, or part that has been altered structurally, modified, neglected, improperly maintained or used for racing, competition or purposes other than for which it was designed.

This warranty excludes damages or failures resulting from: improper lubrication; improper engine timing; improper fuel; surface imperfections caused by external stress, heat, cold or contamination; operator error or abuse; improper component alignment, tension, adjustment or altitude compensation; snow, water, dirt or other foreign substance ingestion/contamination; improper maintenance; modified components; use of aftermarket or unapproved components, accessories, or attachments; unauthorized repairs; or repairs made after the warranty period expires or by an unauthorized repair center.

This warranty excludes damages or failures caused by abuse, accident, fire, or any other cause other than a defect in materials or workmanship and provides no coverage beyond the 180, 90, or 30 day period set forth above

### Lubricants and Fluids

1. Mixing oil brands or using non-recommended oil may cause engine damage.
2. Damage or failure resulting from the use of non-recommended lubricants or fluids is not covered by this warranty.

This warranty provides no coverage for personal loss or expense, including mileage, transportation costs, hotels, meals, shipping or handling fees, product pick-up or delivery, replacement rentals, loss of product use, loss of profits, or loss of vacation or personal time.

THE EXCLUSIVE REMEDY FOR BREACH OF THIS WARRANTY SHALL BE, AT HAM-MERHEAD'S OPTION, REPAIR OR REPLACEMENT OF ANY DEFECTIVE MATERIALS, COMPONENTS, OR PRODUCTS. THE REMEDIES SET FORTH IN THIS WARRANTY ARE THE ONLY REMEDIES AVAILABLE TO ANY PERSON FOR BREACH OF THIS WARRANTY. HAMMERHEAD SHALL HAVE NO LIABILITY TO ANY PERSON FOR IN-CIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES OF ANY DESCRIPTION, WHETHER ARISING OUT OF EXPRESS OR IMPLIED WARRANTY OR ANY OTHER CONTRACT, NEGLIGENCE, OR OTHER TORT OR OTHERWISE. THIS EXCLUSION OF CONSEQUENTIAL, INCIDENTAL, AND SPECIAL DAMAGES IS INDEPENDENT FROM AND SHALL SURVIVE ANY FINDING THAT THE EXCLUSIVE REMEDY FAILED OF ITS ESSENTIAL PURPOSE.

THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE IS EXCLUDED FROM THIS LIMITED WARRANTY. ALL OTHER IMPLIED WARRANTIES (INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY) ARE LIM-ITED IN DURATION TO THE ABOVE WARRANTY PERIODS. HAMMERHEAD DIS-CLAIMS ALL EXPRESS WARRANTIES NOT STATED IN THIS WARRANTY. SOME STATES DO NOT PERMIT THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES OR ALLOW LIMITATIONS ON THE DURATION OF IM-PLIED WARRANTIES, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU IF IN-CONSISTENT WITH CONTROLLING STATE LAW.

# WARRANTY

## How To Obtain Warranty Service

If your vehicle requires warranty service, you must take it to a HAMMERHEAD Servicing Dealer. When requesting warranty service you must present your copy of the Warranty Registration Form to the dealer. (THE COST OF TRANSPORTATION TO AND FROM THE DEALER IS YOUR RESPONSIBILITY.) HAMMERHEAD suggests that you use your original selling dealer; however, you may use any HAMMERHEAD Servicing Dealer to perform warranty service.

### *In the Country where your product was purchased:*

Warranty or Service Bulletin repairs must be done by an authorized HAMMERHEAD dealer. If you move or are traveling within the country where your product was purchased, Warranty and Service Bulletin repairs may be requested from any authorized HAMMERHEAD dealer that sells the same line as your product.

### *Outside the Country where your product was purchased:*

If you are traveling temporarily outside the country where your product was purchased, you should take your product to an authorized HAMMERHEAD dealer. You must show the dealer photo identification from the country of the selling dealer's authorized location as proof of residence. Upon residence verification, the servicing dealer will be authorized to perform the warranty repair.

### *If you move:*

If you move to another country, be sure to contact HAMMERHEAD Customer Assistance and the customs department of the destination country before you move. Product importation rules vary considerably from country to country. You may be required to present documentation of your move to HAMMERHEAD in order to continue your warranty coverage. You may also be required to obtain documentation from HAMMERHEAD in order to register your product in your new country. You should warranty register your product at a local HAMMERHEAD dealer in your new country immediately after you move to continue your warranty coverage and to ensure that you receive information and notices regarding your vehicle.

### *If you purchase from a private party:*

If you purchase a HAMMERHEAD product from a private party, to be kept and used outside of the country in which the product was originally purchased, all warranty coverage will be denied. You must nonetheless register your product under your name and address with a local HAMMERHEAD dealer in your country to ensure that you receive safety information and notices regarding your product.

## Exported Products

EXCEPT WHERE SPECIFICALLY REQUIRED BY LAW, THERE IS NO WARRANTY OR SERVICE BULLETIN COVERAGE ON THIS PRODUCT IF IT IS SOLD OUTSIDE THE COUNTRY OF THE SELLING DEALER'S AUTHORIZED LOCATION. This policy does not apply to products that have received authorization for export from HAMMERHEAD. Dealers may not give authorization for export. You should consult an authorized dealer to determine this product's warranty or service coverage if you have any questions. This policy does not apply to products registered to government officials or military personnel on assignment outside the country of the selling dealer's authorized location. This policy does not apply to Safety Bulletins.



# WARRANTY

## Notice

If your product is registered outside of the country where it was purchased and you have not followed the procedure set above, your product will no longer be eligible for warranty or service bulletin coverage of any kind, other than safety bulletins. Products registered to government officials or military personnel on assignment outside of the country where the product was purchased will continue to be covered by the Limited Warranty.

Please work with your dealer to resolve any warranty issues. Should your dealer require any additional assistance, they will contact the appropriate person at HAMMERHEAD.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state or in different countries. If any of the above terms are void because of federal, state, local law, all other warranty terms will remain in effect.

***For questions call HAMMERHEAD Customer Assistance:***

United States & Canada: 214-513-1700

# WARRANTY

## Emissions Control System Limited Warranty

This emissions control system limited warranty is provided in addition to the HAMMERHEAD Off-Road Inc. standard limited warranty for your vehicle. In the remainder of this Emission Control System Limited Warranty, HAMMERHEAD Off-Road Inc. will be referred to as HAMMERHEAD.

For HAMMERHEAD vehicles containing LIQUID COMBUSTION TECHNOLOGY, LLC engines, please refer to the LIQUID COMBUSTION TECHNOLOGY, LLC EMISSION CONTROL WARRANTY STATEMENT. This LIQUID COMBUSTION TECHNOLOGY, LLC EMISSION CONTROL WARRANTY STATEMENT is provided to you in the LCT ENGINES Operation Manual which was included with your vehicle at purchase. Please contact your local HAMMERHEAD dealer to replace a lost or missing LCT ENGINES Operation Manual. If the dealer is unavailable or unable to provide the needed materials, please contact HAMMERHEAD for assistance.

Hammerhead Off-Road Inc.  
1200 Lakeside Parkway #400  
Flower Mound, TX 75028  
Telephone: 214-513-1700  
Fax: 214-513-1711  
Email: [mail@hammerheadoffroad.com](mailto:mail@hammerheadoffroad.com)

# WARRANTY

## Off-Road Warranty Registration Form

### Registration Terms & Conditions

In order to activate the warranty, please follow the instructions below:

1. Make a copy of the Bill of Sale.
2. Make a copy of Pre-Delivery Checklist.
3. Fill out warranty card and send with all above documents to:

Hammerhead Off-Road  
Attn: Warranty Registration  
1200 Lakeside Parkway Ste. 400  
Flower Mound, TX 75028  
Or, Fax to 214-513-1738

Or, go online to [www.hammerheadoffroad.com](http://www.hammerheadoffroad.com)  
under dealer's only section

Hammerhead Off-Road Warranty Registration Card	
(Must be sent in with a copy of sales receipt)	
VIN# _____	Model: _____
Dealer Name: _____	
Dealer Address: _____	
City: _____	State: _____ Zip: _____
Customer Name: _____	
Customer City: _____	State: _____
Customer Phone: _____	Email: _____
Date of Purchase: _____	
I Certify that all information provided is true and correct to the best of my knowledge. I understand the exceptions and limitations of the warranty coverage.	
Customer Signature: _____	Date: _____





# INDEX

## A

Adjustment, Throttle Freeplay . . . . .	53
Air Filter . . . . .	51
Air Filter Cleaning . . . . .	51

## B

Battery . . . . .	59
Before Riding . . . . .	26
Belt Burning . . . . .	67
Belt Wear . . . . .	67
Boots . . . . .	9
Brake Inspection . . . . .	54
Brake Pedal . . . . .	22
Brake System Break-in . . . . .	25
Brakes . . . . .	54
Braking . . . . .	28
Break-In Period . . . . .	24-25
Burning Belts . . . . .	67

## C

Cap, Fuel . . . . .	23
Chart, Periodic Maintenance . . . . .	38-42
Chrome Wheel Care . . . . .	61
Cleaning and Storage . . . . .	59-64
Cleaning the Air Filter . . . . .	51
Clothing . . . . .	9
Component Locations . . . . .	20
Condition, Spark Plugs . . . . .	47
Corrosion Removal, Chrome . . . . .	61
Cover for Storage . . . . .	63
Crankcase Emission Control System . . . . .	37

## D

Drive Belt Wear . . . . .	67
Drive Chain Lubrication . . . . .	46
Drive Chain Slack Adjustment . . . . .	46
Drivetrain Break-In . . . . .	25
Driving Downhill . . . . .	34
Driving on a Sidehill . . . . .	34
Driving on Slippery Surfaces . . . . .	32
Driving Over Obstacles . . . . .	36
Driving Procedures . . . . .	29-30
Driving Through Water . . . . .	35
Driving Uphill . . . . .	33
Driving with a Passenger . . . . .	31

## E

Emission Control, Crankcase . . . . .	37
Emission Control, Noise . . . . .	37
Engine Break-In . . . . .	25
Engine Fogging . . . . .	63
Engine Oil . . . . .	44-45
Engine Stopping . . . . .	28
Equipment Modifications . . . . .	7
Eye Protection . . . . .	9

## F

Filter Care During Storage . . . . .	62
Filter Cleaning, Air . . . . .	51
Filter Systems . . . . .	51
Filter, Air . . . . .	51
Fluid Levels During Storage . . . . .	62
Fogging the Engine . . . . .	63
Fouled Plugs . . . . .	47
Freeplay Adjustment, Throttle . . . . .	53
Freeplay, Steering Wheel . . . . .	55
Fuel Cap . . . . .	23
Fuel Safety . . . . .	17
Fuel Stabilizer . . . . .	62
Fuel Tank Filler Cap . . . . .	23

## G

Gap, Spark Plug . . . . .	47
Gasoline Handling . . . . .	17
Gloves . . . . .	9

## H

Helmet . . . . .	9
------------------	---

## I

Ignition Switch . . . . .	22
Inspection, Brakes . . . . .	54
Inspection, Pre-Ride . . . . .	26
Inspection, Steering Wheel . . . . .	55
Inspection, Throttle Freeplay . . . . .	52

## K

Key, Periodic Maintenance Chart . . . . .	39
---	----

## L

Light Switch . . . . .	22
Lubrication for Storage . . . . .	63
Lubrication Recommendations . . . . .	43

## M

Maintenance Log . . . . .	76
Maintenance, Periodic . . . . .	38-42

# INDEX

## N

- New Operator Driving Proced... 29-30
- Noise Emission Control System . . . . 37

## O

- Obstacles . . . . . 36
- Oil**
  - Engine . . . . . 44-45
- Oil Change**
  - Engine Oil . . . . . 45
- Oil Check**
  - Engine Oil . . . . . 44

## P

- Parking on an Incline . . . . . 35
- Parking the Vehicle . . . . . 28
- Periodic Maintenance Chart . . . . 38-42
- Plug Condition . . . . . 47
- Plug Gap . . . . . 47
- Plug Torque . . . . . 47
- Plug, Spark . . . . . 47
- Plugs, Fouled . . . . . 47
- Polishing the Vehicle . . . . . 60
- Pre-Ride Inspection . . . . . 26

## R

- Refueling Safety . . . . . 17
- Registration, Warranty . . . . . 70
- Removing the Vehicle from Storage 64
- Riding Gear . . . . . 8-9

## S

- Safe Operation Practices . . . . . 27
- Safety Labels . . . . . 18-19
- Safety Symbols . . . . . 4
- Safety Training, ROHVA . . . . . 27, 29
- Safety Warnings . . . . . 10-17**
  - Age Restrictions . . . . . 10
  - Carrying a Passenger . . . . . 12
  - Crossing Hillside . . . . . 13
  - Driving Downhill Improperly . . 14
  - Excessive Speeds . . . . . 13
  - Exposure to Exhaust . . . . . 17
  - Failure to Inspect . . . . . 11
  - Frozen Bodies of Water . . . . . 16
  - Hot Exhaust Systems . . . . . 17
  - Improper Hill Climbing . . . . . 14
  - Improper Tires and Maintenance . 16
  - Instruction . . . . . 10
  - Jumps and Stunts . . . . . 13
  - Multiple Passengers . . . . . 12
  - Obstacles . . . . . 16

- Operating a Damaged Vehicle . . 17
- Operating on Sand . . . . . 15
- Operating Through Water . . . . . 16
- Overloading . . . . . 15
- Pavement . . . . . 12
- Physical Control . . . . . 13
- Protective Apparel . . . . . 12
- Public Roads . . . . . 12
- Reverse . . . . . 15
- Rider Height . . . . . 11
- Seat Belts . . . . . 11
- Slippery Terrain . . . . . 15
- Stalling on a Hill . . . . . 14
- Turning Improperly . . . . . 13
- Unauthorized Use of the Vehicle . 17
  - Unfamiliar Terrain . . . . . 15
  - Using Alcohol or Drugs . . . . . 11
- Severe Use Definition . . . . . 38
- Signal Words . . . . . 4
- Spark Plug . . . . . 47
- Spark Plug Condition . . . . . 47
- Spark Plug Gap . . . . . 47
- Spark Plug Removal . . . . . 48
- Spark Plug Torque . . . . . 47
- Spark Plugs, Fouled . . . . . 47
- Speed Control System . . . . . 22
- Stabilizing the Fuel . . . . . 62
- Steering Wheel Inspection . . . . . 55
- Stopping the Engine . . . . . 28
- Storage . . . . . 59-64
  - Storage and Inspection . . . . . 63
  - Storage and Lubrication . . . . . 63
  - Storage Area . . . . . 63
  - Storage, Covers . . . . . 63
  - Storage, Fluid Levels . . . . . 62
  - Storage, Oil Change . . . . . 62
  - Storage, Removal . . . . . 64
- Switches**
  - Ignition . . . . . 22
  - Light . . . . . 22

# INDEX

## T

Throttle Freeplay Adjustment . . . . .	53
Throttle Freeplay Inspection . . . . .	52
Throttle Freeplay, Freeplay, Throttle	52
Throttle Pedal . . . . .	22
Throttle System . . . . .	52
Tire Tread Depth . . . . .	56
<b>Tires . . . . .</b>	<b>56-57</b>
Front Wheel Hub Tightening . .	56
Wheel Nut Torque . . . . .	57
Torque, Spark Plug . . . . .	47
Transporting the Vehicle . . . . .	64
Tread Depth, Tire. . . . .	56

## V

Vehicle Identification Numbers. . . . .	6
Vehicle Immersion. . . . .	58
Vehicle Transport . . . . .	64

## W

Warning Symbols . . . . .	4
Washing the Vehicle . . . . .	59-60
Water, Immersion of Vehicle . . . . .	58
Wear, Drive Belt . . . . .	67
Wheel Hub Tightening . . . . .	56
Wheel Nut Torque Specifications . .	57
Wheel Replacement. . . . .	56-57
Wheels, Front . . . . .	56
Wheels, Rear . . . . .	57