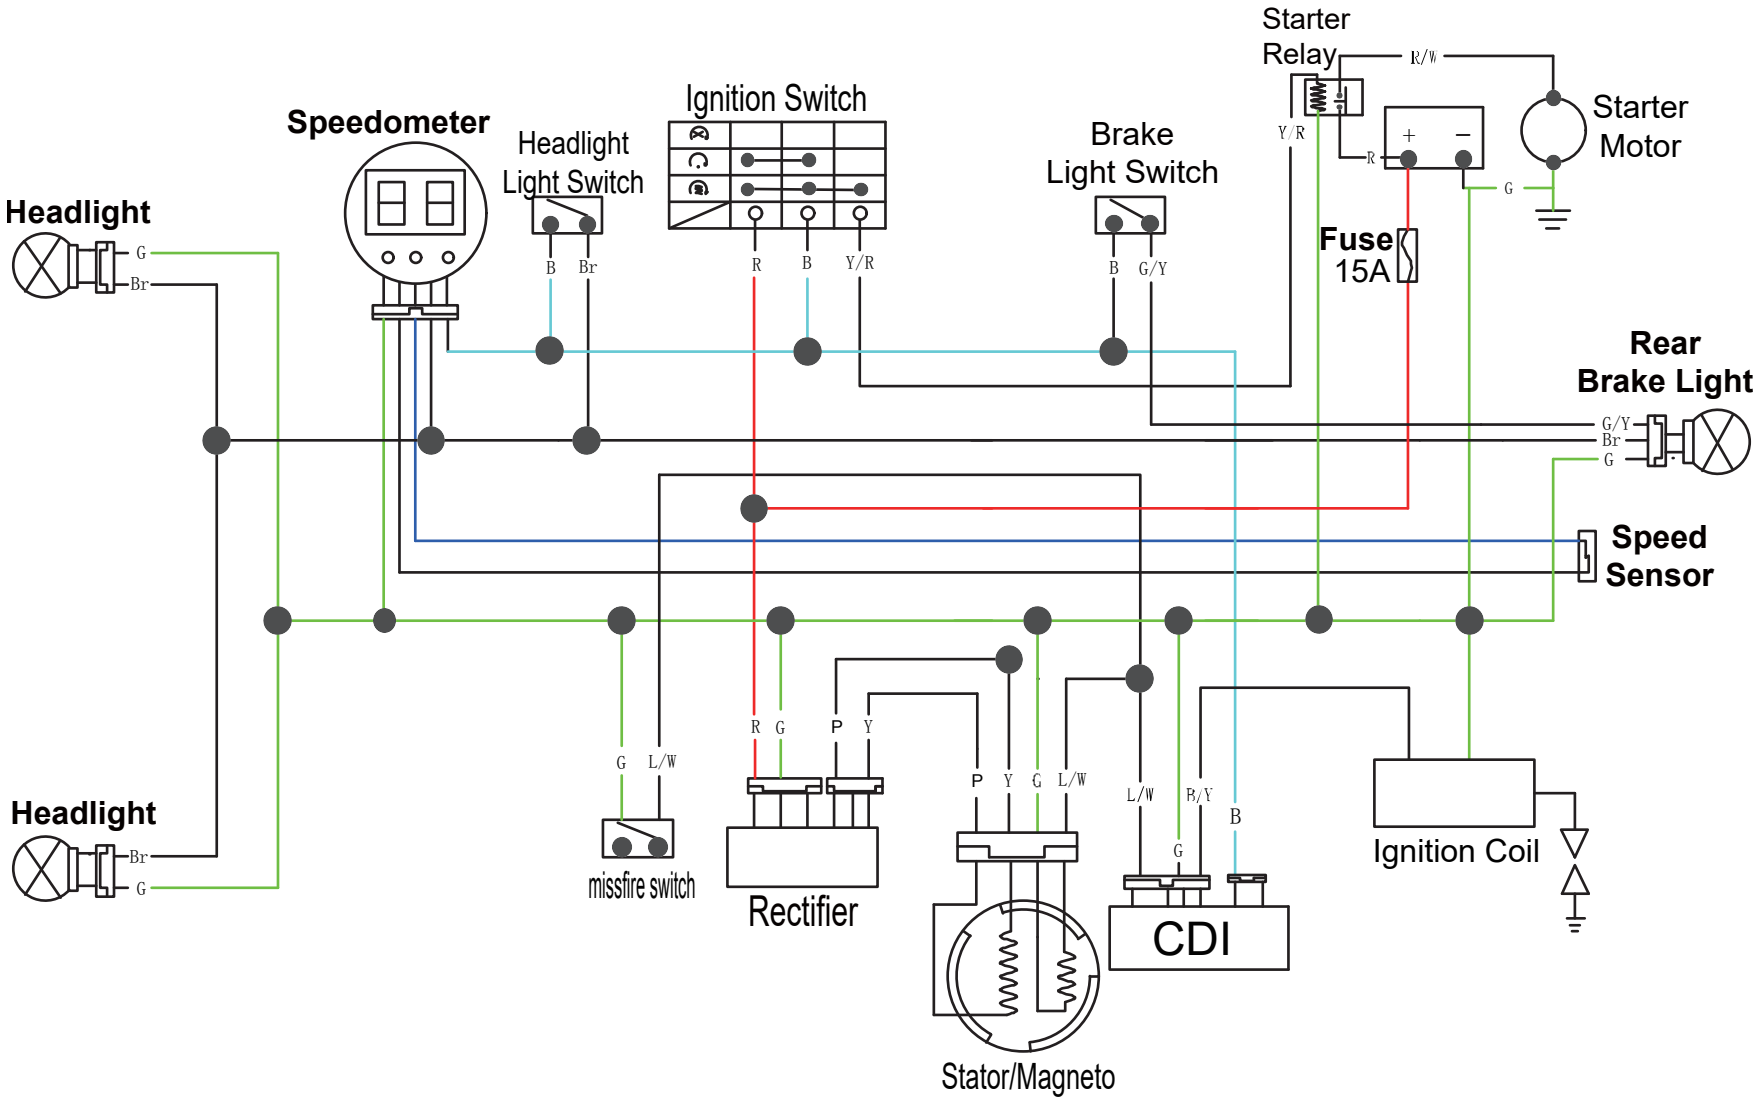

Starter
Relay
R/W
Starter
Motor
Speedometer
Ignition Switch
Headlight
Light Switch
Brake
Light Switch
Y/R
R
G
Fuse
15A
Headlight
G
Br
B
Br
R
B
Y/R
B
G/Y
Rear
Brake Light
G/Y
Br
G
Speed
Sensor
Headlight
Br
G
G
L/W
R
G
P
Y
P
Y
G
L/W
L/W
B/Y
B
G
missfire switch
Rectifier
CDI
Ignition Coil
Stator/Magneto