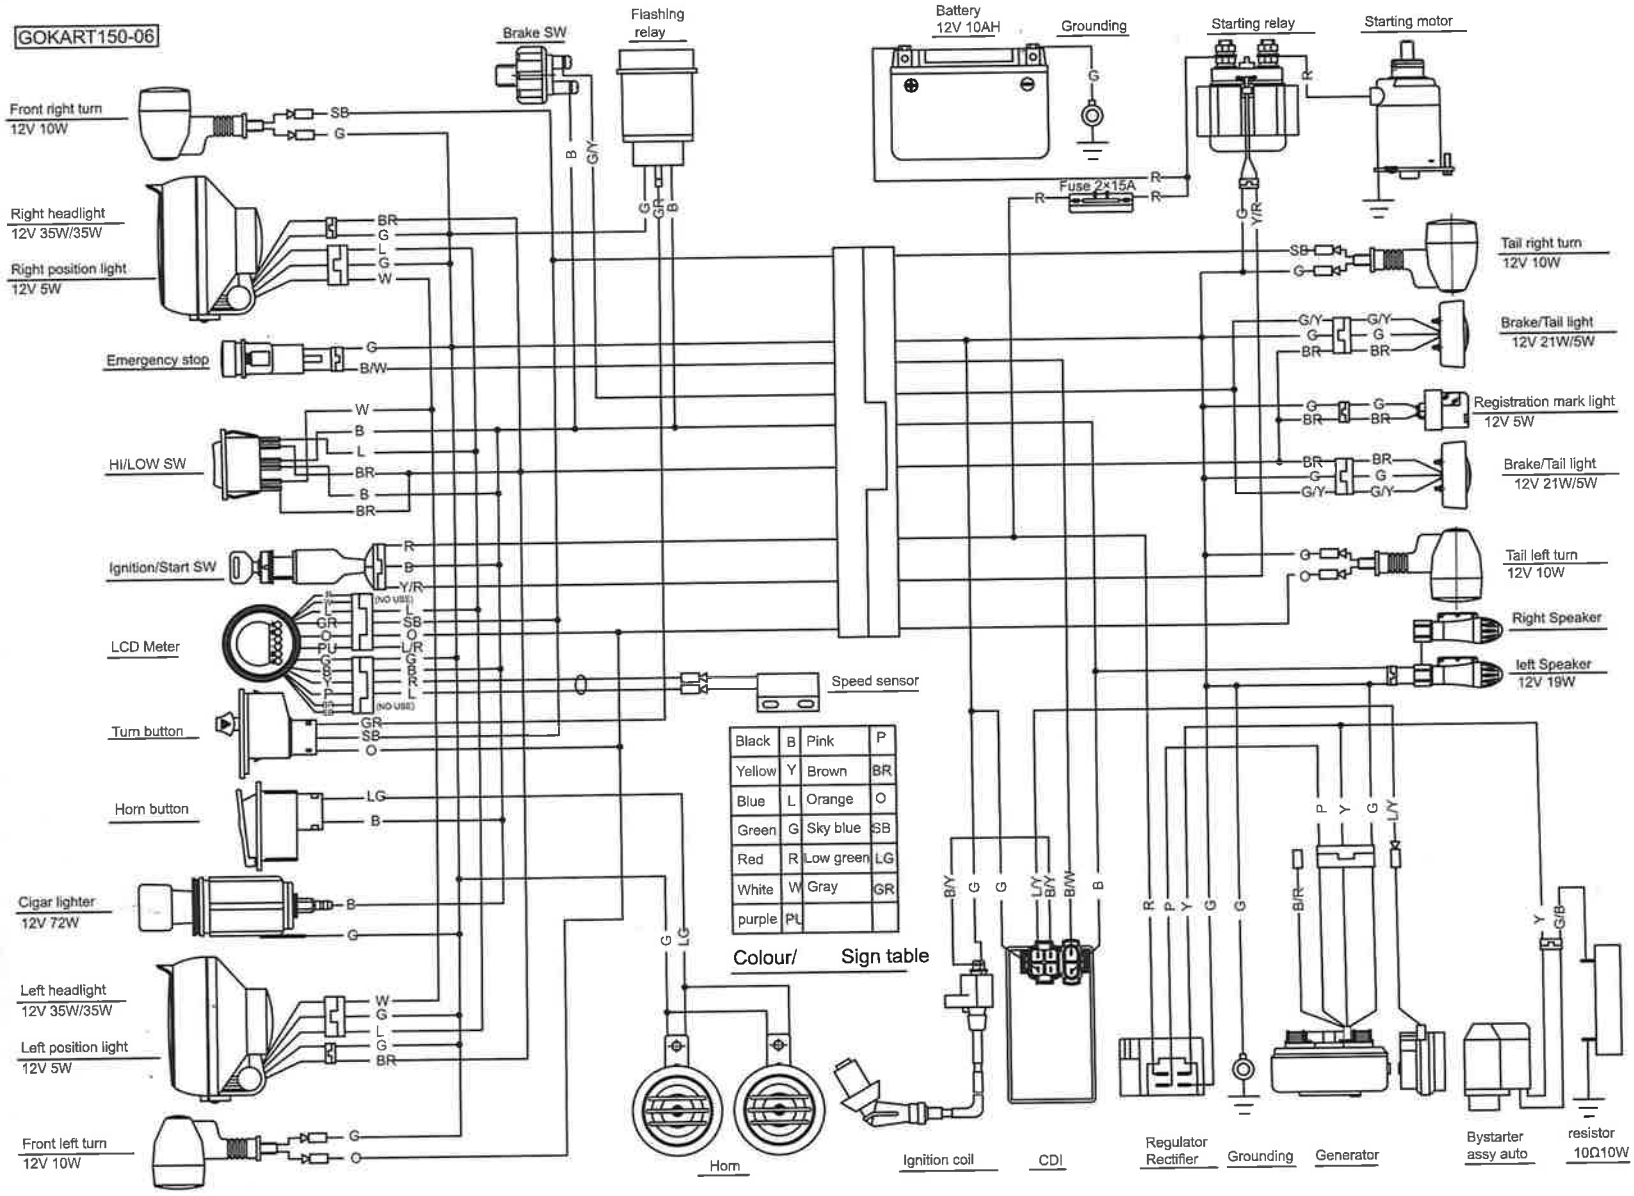

GOKART150-06
Front right turn
12V 10W
Right headlight
12V 35W/35W
Right position light
12V 5W
Emergency stop
HI/LOW SW
Ignition/Start SW
LCD Meter
Turn button
Horn button
Cigar lighter
12V 72W
Left headlight
12V 35W/35W
Left position light
12V 5W
Front left turn
12V 10W
Brake SW
Flashing relay
Battery
12V 10AH
Grounding
Starting relay
Starting motor
Fuse 2×15A
Tail right turn
12V 10W
Brake/Tail light
12V 21W/5W
Registration mark light
12V 5W
Brake/Tail light
12V 21W/5W
Tail left turn
12V 10W
Right Speaker
left Speaker
12V 19W
Speed sensor
Horn
Ignition coil
CDI
Regulator
Rectifier
Grounding
Generator
Bystarter
assy auto
resistor
10Ω10W
Colour/ Sign table
Black B
Yellow Y
Blue L
Green G
Red R
White W
purple PU
Pink P
Brown BR
Orange O
Sky blue SB
Low green LG
Gray GR